



# Drift Baby Rocker

## Instruction manual



### **IMPORTANT! KEEP FOR FUTURE REFERENCE**

Your child's safety may be affected if you do not follow these instructions.

This product is intended only for a child who is unable to sit unaided and weighs less than 9kg (approx 6 months old).

This product has been tested to BS EN 12790:2009 and EN 16232:2013.

## Safety instructions

### **WARNING:**

- Never leave the child unattended.
- Do not use the reclined cradle once your child can sit unaided or weighs more than 9kg.
- This reclined cradle is not intended for prolonged periods of sleeping.
- It is dangerous to use this reclined cradle on an elevated surface, e.g. a table.
- Always use the restraint system.
- Never use the toy bar to carry the rocker.
- This reclined cradle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.
- Do not use the reclined cradle if any components are broken or missing.
- Do not use accessories or replacement parts other than those approved by the manufacturer.
- To avoid injury ensure children are kept away when assembling or disassembling this product.
- Do not let children play with this product. Store the product away from children.
- Do not move or lift this product with a child in it.
- When the product is connected to a music player, ensure that the volume of the music player is set to a low value.
- Do not use a power adaptor other than the one supplied with this product.
- Keep children away from the power adaptor.
- Regularly check the adaptor cable for damage or if loose.
- Never short-circuit any power terminals.
- Assembly by an adult!
- In the event of any soft toy supplied with this product becoming ripped or torn, the toy should no longer be used and should be disposed of to prevent the risk of choking on possible small parts.
- Transformers used with the infant swing are to be regularly examined for damage to the cord, plug enclosure and other parts, and in the event of such damage, they shall not be used.
- The infant swing shall only be used with the recommended transformer (as supplied).

Assemble and adjust the reclined cradle with care.

The correct use and maintenance of your reclined cradle will extend it's use.

When somebody else is using the reclined cradle, ensure they also know how to use and adjust it and all necessary safety precautions.

The safety of your child is your responsibility.

## Battery warnings

Only use the recommended batteries observing correct voltage and size.  
Always take care to insert your batteries correctly, observing the plus and minus marks on the battery and appliance.  
Do not mix new and used batteries.  
Do not mix different types of batteries.  
Always remove batteries (whether they are dead or not) if you are not going to use the product for long periods (as batteries may leak and cause damage).  
Never attempt to re-charge ordinary (non-rechargeable) batteries.  
Remove rechargeable batteries before attempting to charge them.  
Do not short-circuit the supply terminals  
Batteries should always be changed by an adult.  
Keep batteries out of reach of children.  
Children can choke on batteries. If swallowed seek medical advice immediately.

## Disposal

The crossed out wheellie bin symbol indicates that the product, at the end of its life, must be disposed of separately from domestic waste, either by taking it to a separate waste disposal site for electric and electronic appliances or by returning it to your dealer when you buy another similar appliance. If the disused appliance is collected correctly as separate waste, it can be recycled, treated and disposed of ecologically. For further information regarding the waste disposal services available, contact your local waste disposal agency or the shop where you bought the appliance.



Do not treat batteries (old or new) as household waste. Never dispose of batteries in a fire this may cause them to explode. Batteries (old or new) should be disposed of by taking them to a designated collection point or recycling facility.

## Your 3 year warranty

Whilst we make and test our products to the highest standards of durability there's always a small chance of a hiccup! Our promise is to repair, replace or refund a MyChild product that has an identified manufacturing defect from the date of purchase for a full 3 years thereafter at no extra cost.

However, you must register within 28 days of the date of purchase to receive the full 3 years guarantee!

To receive your full guarantee you can register your product by: visiting <https://mychild.co.uk/pages/warranty> and complete the warranty form, or by telephone on 0161 335 2508.

# Welcome

Thank you for purchasing the MyChild Drift Baby Rocker  
Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Your child's safety is your responsibility. If you have a query with this product or require replacement parts, please contact the MyChild Helpline on 0161 335 2508.

Lay out the parts on a soft level surface and compare to the part/fixings checklist below. Do not discard any packaging until you are sure that you have all the parts.

**WARNING!** Assembly by an adult. Keep away from children until fully assembled. Keep children clear during assembly as pack contains small parts which may present a choking hazard.

## Parts checklist


### Contained in your carton are:

Nº	Part	Qty
A	Seat unit	1
B	Base unit	1
C	Toybar	1
D	Panda toy	1
E	Elephant toy	1
F	Power adaptor	1
G	Remote control	1


You will require one Phillips screwdriver (not supplied).




A

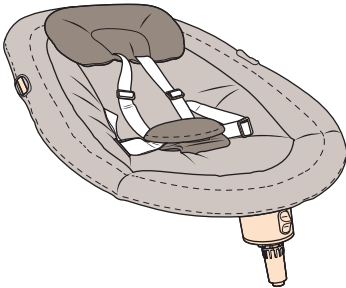

B

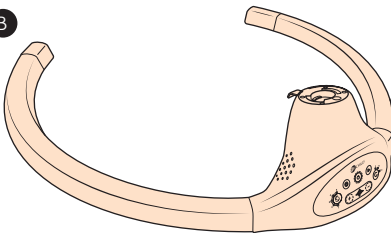


C

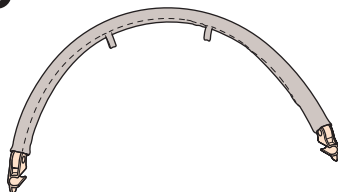

D



E

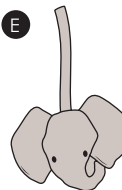

F




G



## Assembling the rocker


1. Line up the seat unit (A) with the base (B) as shown. Insert the spindle (i) into the base. **DO NOT** force the spindle in. If it will not go in rotate the seat unit left and right by a small amount until the spindle naturally locates itself.

**To disassemble:** Pull the release tab (ii) and lift the seat unit off from the base.

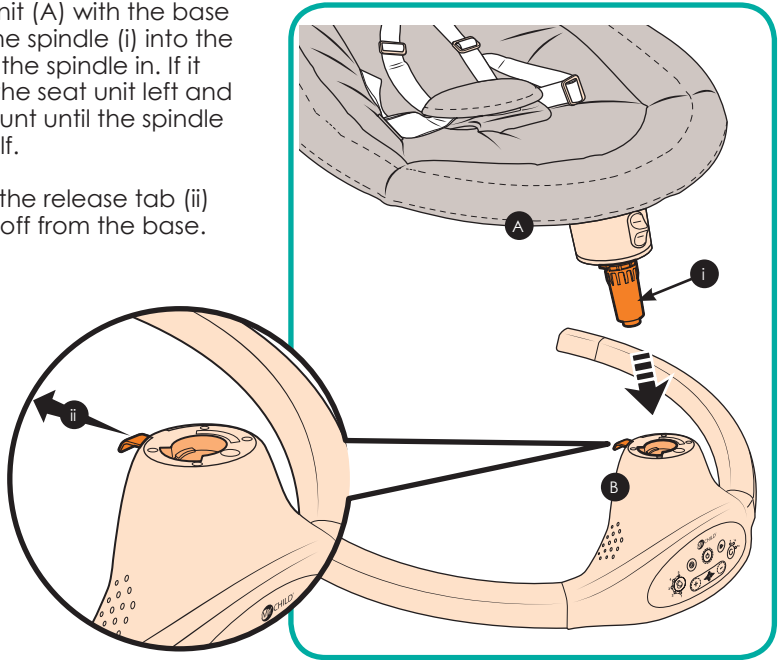

## Lock the rock





1. To prevent the rocking motion when in use, push button (i) down to engage the lock push it back up to release the lock.

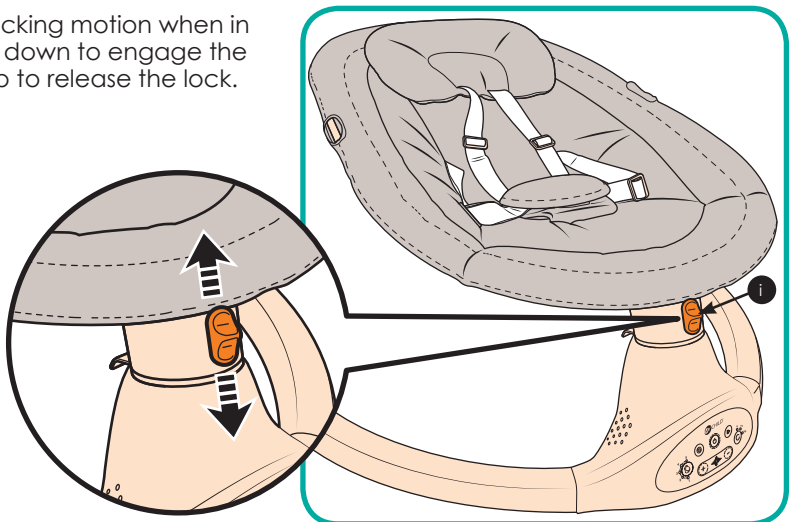

## Attaching the toy bar and toys (continued)

**WARNING! DO NOT lift the rocker by the toybar. The toybar is NOT a carry handle.**

1. **Attaching the toybar:** Push the plastic clips (i) at each end of the toybar (C) on to the seat unit's metal frame, taking care not to trap the seat fabric.

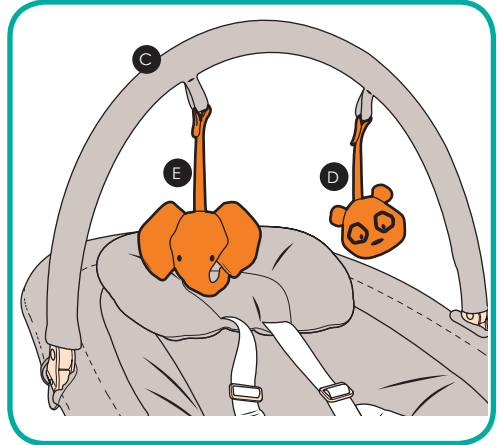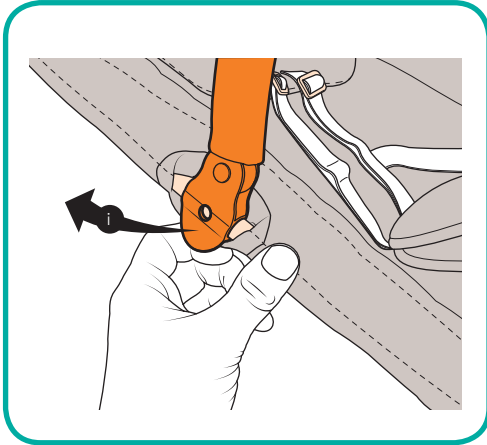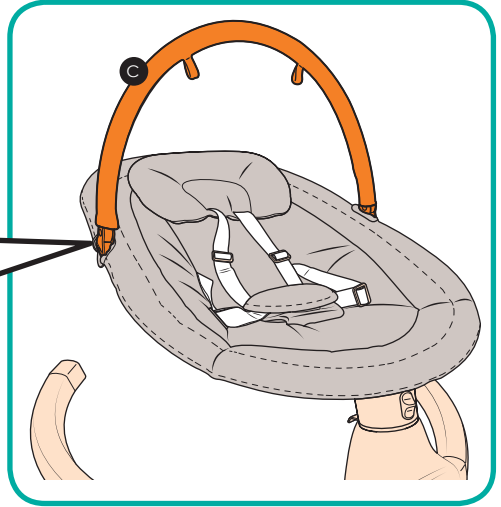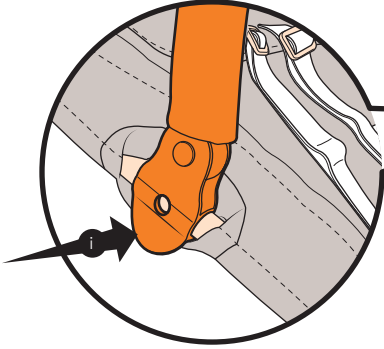

2. **To remove the toybar:** using your thumb and forefinger prise the plastic clips (i) outwards off from the seat unit frame.

3. **Attaching the toys:** Feed the long fabric strips on toys (D) and (E) through the two loops on the toybar (C). Secure using the velcro tabs.

## Using the harness

To access the harness, open the crotch pad by pulling up on the pad at point (i).




To release the harness, press in the button on the centre of the buckle (ii) and pull out the clips.

You can now place your child in the swing and re-fasten the harness by pushing the clips back into the buckle (ii).


Ensure the harness is securely and comfortably adjusted around your child.

The harness has two sliding adjusters (iii) on the shoulder straps, two on the waist strap (iv) that can be used to make alterations to the fit.

Adjusters (iii) and (iv) can be altered by sliding them in the desired direction.

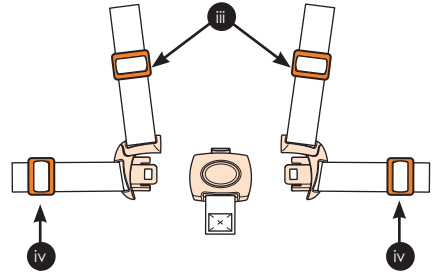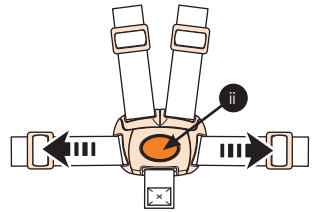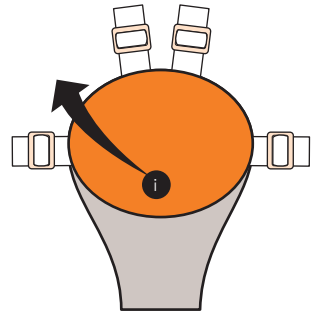


The head pillow (v) can be removed for washing to do so slide the shoulder strap clips (vi) off from the waist strap clips (vii). You can now slide the shoulder straps out from the pillow and remove it.

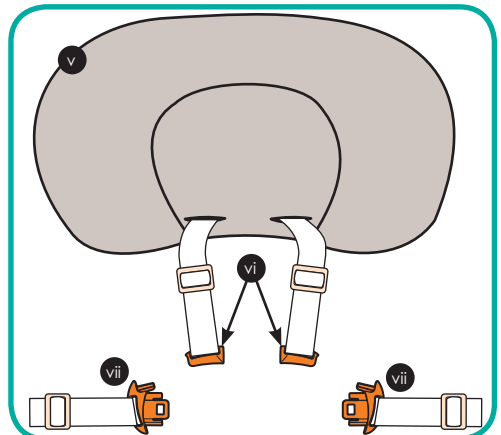

# Power supply and batteries


**NOTE!** Batteries are not necessary to operate the rocker but can be used if you wish to use the rocker where a power socket is not available.

The rocker uses 4 x AAA 1.5v batteries and the remote uses 1 x CR2025 button-cell battery.

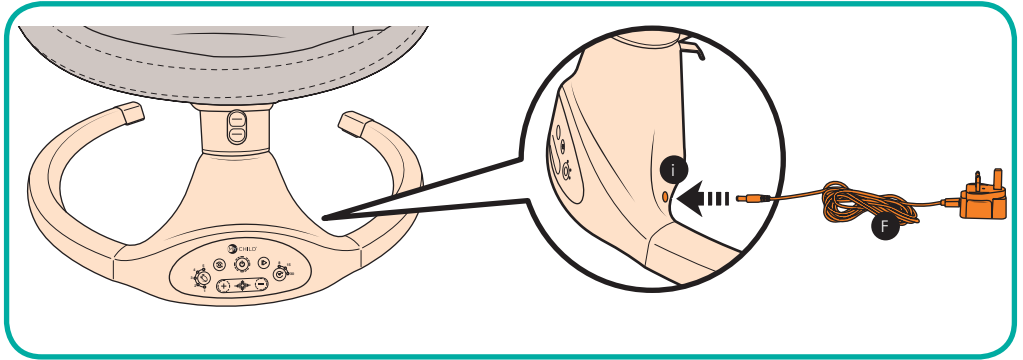

**1. Mains operation:** Insert the round-pin end of the power adaptor (F) into the round socket at the rear of the rocker base (i).

**WARNING! Only use the power adaptor supplied with this product.**

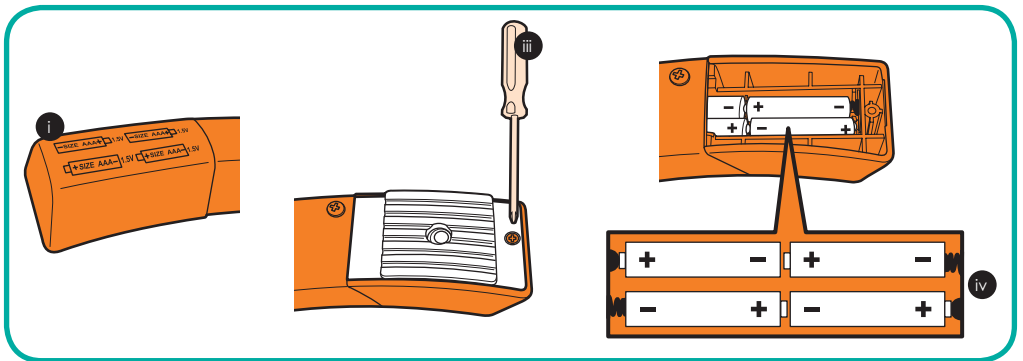

**2. Battery operation:** The battery compartment is located on the underside of the base and can be found by the diagram (i) printed at the end of the right-hand base arm.

Unscrew the battery cover using a Phillips screwdriver (iii) and remove the cover.


Insert 4 x AAA 1.5v batteries ensuring you observe the correct battery-orientation as shown in diagram (iv).

Replace the battery cover and tighten the screw (iii) to secure the cover.




## Power supply and batteries (continued)

**3. Remote control battery:** The remote control comes preloaded with a battery. Simply remove the plastic isolation tab (v) to connect the battery.

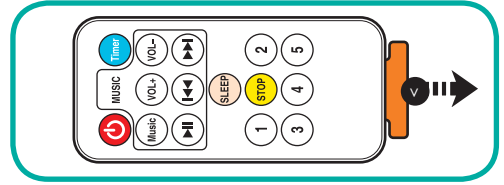






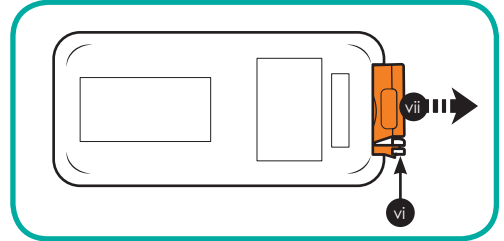


**4. Replace remote control battery:** To replace the battery push clip (vi) inwards and pull the battery draw (vii) out.

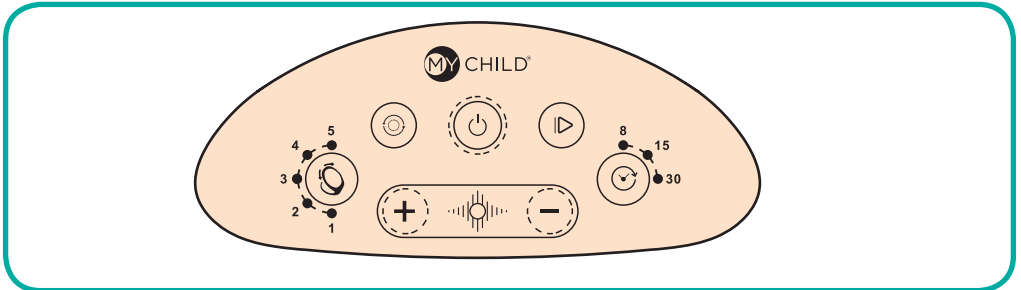Insert a new CR2025 button-cell battery into the battery draw and slide the draw back into the remote control.















## Operating the rocker



-  **Power button:** Plug in the mains adaptor and the power button will light up. Press the button to turn off or on.
-  **Play button:** Press to turn on or off the built-in music. If bluetooth is connected and playing, pressing this button will stop the bluetooth and the built-in music will take over.
-  **Swing amount button:** Press to choose 1 of 5 swing settings with 1 being the least amount of swinging motion and 5 being the greatest.
-  **Swing duration button:** Press to choose a swing duration setting of 8, 15 or 30 minutes.
-  **Song skip button:** Press to play the next song (works for built-in and bluetooth).
-  **Volume up button:** Press to increase the volume gradually.
-  **Volume down button:** Press to lower the volume gradually.

## Operating the rocker via the remote control

	<b>Power on/off</b>		<b>Play/Pause *</b>
	<b>Time settings</b>		<b>Previous song</b>
	<b>Built-in music/ Bluetooth music *</b>		<b>Next song</b>
	<b>Volume up</b>		<b>Volume down</b>
	<b>Swinging motion settings</b>		
	<b>Sleep mode **</b>		<b>Stop swing ***</b>




\* If bluetooth is connected and playing, pressing this button will stop the bluetooth and the built-in music will take over.

\*\* Pressing sleep mode will cause the rocker to switch to swing motion setting 2 and will keep running for 15 minutes before shutting down.

\*\*\* Press to stop the swinging motion, press any of the 5 motion settings to start again.


## Bluetooth function

The rocker, once switched on, will be discoverable as BT\_BABY006 by any bluetooth enabled device. There is no need to press any buttons on the rocker\*. Simply connect to BT\_BABY006 via your smartphone or bluetooth enabled device and begin playing your own music or sounds.

\*Note: If you press the play button  on the rocker whilst bluetooth music is playing, this will cause the built-in music to take priority and you will need to press play on your bluetooth enabled device to restart your own music playing again.

## Removing the cover for cleaning

The seat cover can be removed for cleaning.  
Remove the toybar and head pillow.  
Unfasten the two press studs on the rear foot-end of the seat cover (i) and slide the cover off from the seat frame.  
Reverse these steps after you have cleaned the cover.

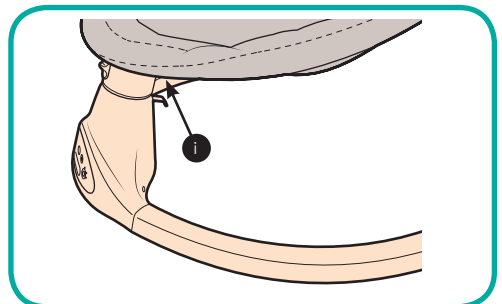

## Care and maintenance

- To prolong the life of your nursery product keep it clean and do not leave it in direct sunlight for extended periods of time.
- Removable fabric covers and trims may be cleaned by hand using warm 30°C water with a household soap or a mild detergent. Allow it to dry fully, preferably away from direct sunlight.
- Do not dry clean, or use bleach.
- Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.
- Non removable fabric covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, DO NOT store the product if it is damp or wet. Always store the product in a well ventilated area.
- Always check parts regularly for tightness of screws, nuts and other fasteners - tighten if required. If any parts are bent, torn, worn or broken please contact Customer Service.
- This product contains electronic components and should not be used in water or in a humid environment.



[www.mychild.co.uk](http://www.mychild.co.uk)

Customerservice@kooltrade.co.uk  
Imported by Kooltrade Ltd. M34 3QA  
Tel: 0161 335 2508