


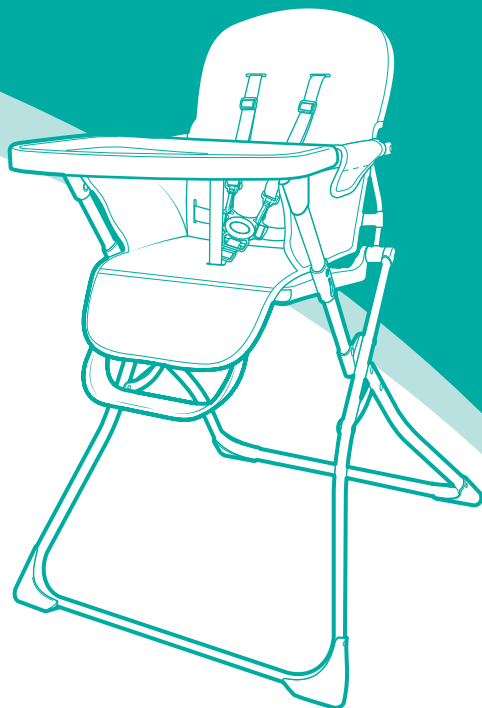

## Hideaway Highchair Instruction manual



# IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Suitable for children who can sit up unaided, aged approximately 6 months to 3 years but not exceeding 15kg.

Your child's safety may be affected if you do not follow these instructions.

This product conforms to BS EN 14988:2017+A1:2020



## Safety instructions

We know that safety is of utmost concern for parents and carers of children. Whilst this product has been developed to all of the relevant safety standards, we need your help to maintain that level of safety and minimise the risk of a baby using this product being harmed. Your baby should never be left alone in the highchair and all harmful objects should be kept out of your child's reach.

**Warning: NEVER** leave the child unattended.

**Warning:** Always use the restraint system.

**Warning:** Falling hazard: Prevent your child from climbing on the product.

**Warning:** Do not use the product unless all components are correctly fitted and adjusted. Your child's safety is your responsibility.

**Warning:** Be aware of the risk of open fires and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the product.

**Warning:** To avoid injury keep your child away when folding and unfolding this product.

**Warning:** Be aware of the risk of tilting when your child can push its feet against a table or any other structure.

- Ensure that the locks and catches on the product are not obstructed at any time during use.
- Do not let your child play with this product.
- Ensure the safety harness is fastened and correctly adjusted at all times.
- Do not use near stairs or steps.
- Ensure the highchair is used on a secure and level surface.
- Never carry the highchair with your baby in it.
- Do not use if any part is broken, torn or missing. Periodically check for loose or damaged parts.
- Only for use by children who can sit up and support themselves unaided.
- Only use parts and accessories approved by the manufacturer. Others may render the highchair unsafe and will invalidate the warranty.
- This highchair is designed to hold 1 child.

## Your 3 year warranty

Whilst we make and test our products to the highest standards of durability there's always a small chance of a hiccup! Our promise is to repair, replace or refund a MyChild product that has an identified manufacturing defect from the date of purchase for a full 3 years thereafter at no extra cost.

However, you must register within 28 days of the date of purchase to receive the full 3 years guarantee!

To receive your full guarantee you can register your product by: visiting <https://mychild.co.uk/pages/warranty> and complete the warranty form, or by telephone on 0161 335 2508.

# Welcome

Thank you for purchasing the MyChild Hideaway Highchair. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.


Your child's safety is your responsibility. If you have a query with this product or require replacement parts, please contact the MyChild Helpline on 0161 335 2508.

The MyChild Hideaway Highchair comes ready assembled in the box. All that is needed is to unfold the highchair and attach the crotch strap.


**WARNING!** Folding and unfolding of the highchair should only be done by an adult.

## Parts


1	Seat cover	5	Harness buckle
2	Seat strap	6	Tray release mechanism
3	Footrest	7	Fold release lever
4	Removable tray		

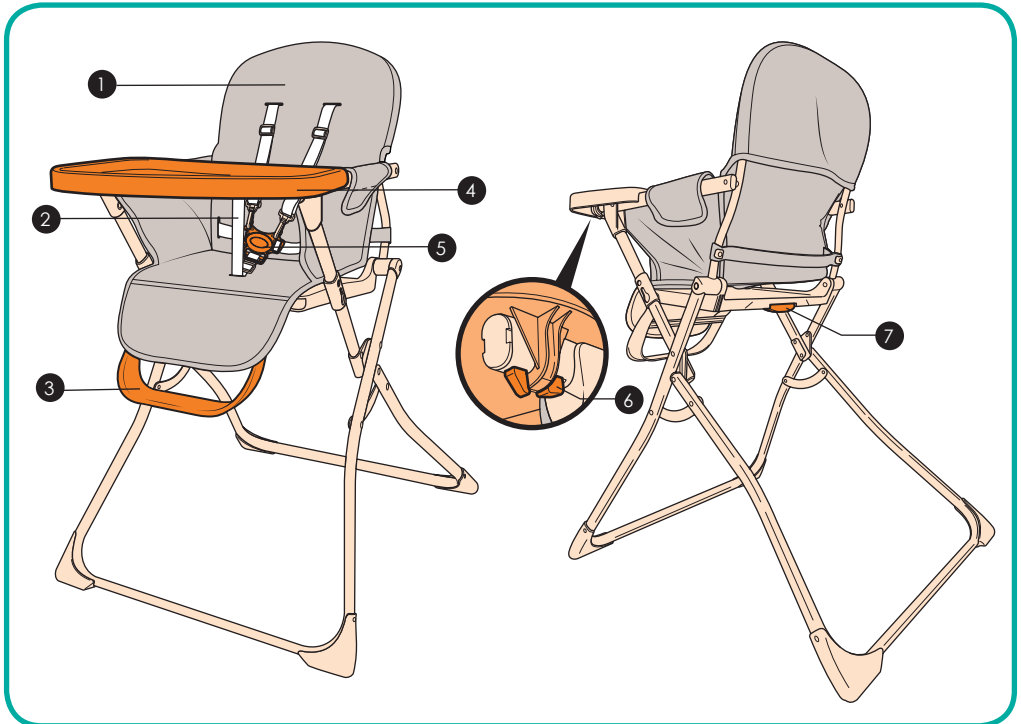


## Unfolding the highchair

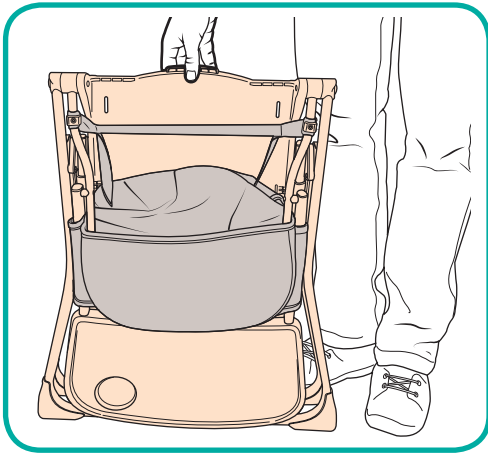


1. Hold the folded highchair as shown, with the tray facing forward and closest to floor.

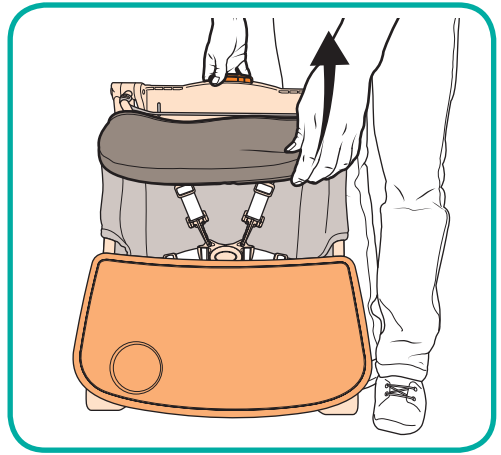

2. With one of your feet placed on the back foot of the highchair, hold the seat's backrest and pull it upwards to unfold the highchair.

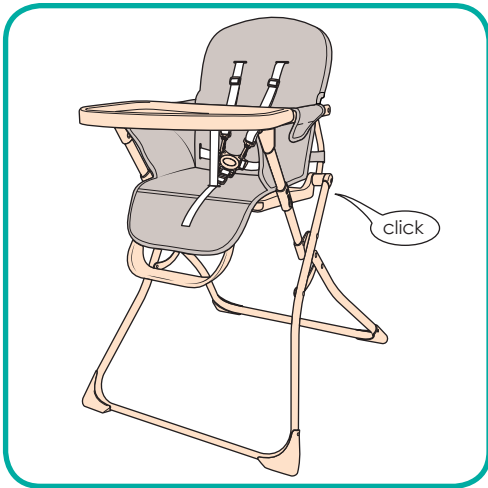


3. Pull the backrest all the way up until the highchair locks in the open position.

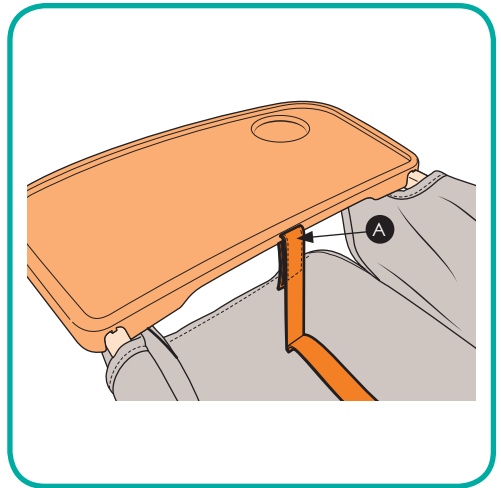

4. Thread the seat strap (A) through the slot in the tray and secure the strap to itself using the Velcro tabs.

**WARNING:** Do not use the highchair without the seat strap being secured. The seat strap provides secondary protection against accidental sliding out and folding of the highchair.


# Placing your child in the highchair

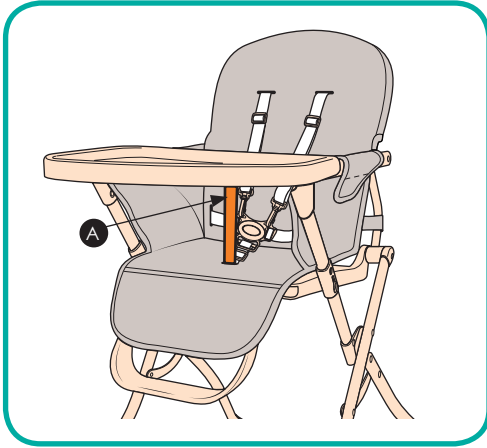

1. Before placing your child in the highchair ensure the seat strap (A) is securely fastened.


**WARNING: Do not use the highchair without the seat strap being secured. The seat strap provides secondary protection against accidental sliding out and folding of the highchair.**

The highchair should only be used with the feeding tray in place. It is essential that the five-point harness is used at all times. When using the highchair at a table ensure the child cannot push against the table or any other surface as this could result in the highchair tipping over.

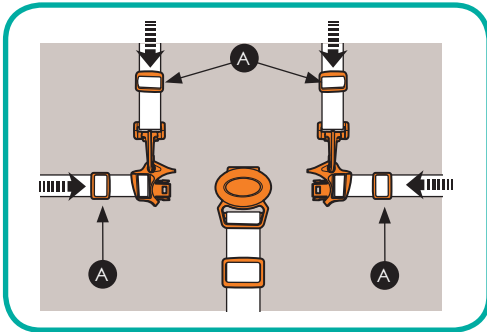

## 2. Fastening the 5-point harness:

To secure your child in the harness, place the crotch strap between your child's legs and insert the harness clips into the buckle, making certain your child's fingers are clear. Adjust the sliders (A) on the waist and shoulder straps so that the harness fits snugly.

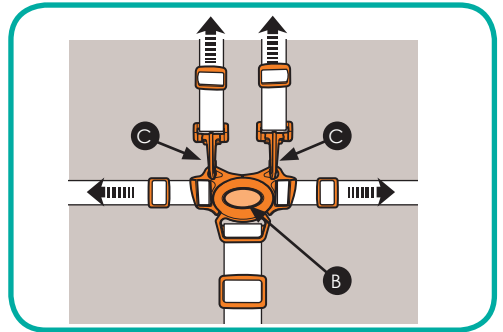


## 3. Releasing the 5-point harness:


Press the harness release button (B). The shoulder straps can be unclipped from the waist straps if necessary (C).

## Removing the tray

The highchair should only be used with the feeding tray in place. The tray should only be removed in order to clean it and should be reattached before the highchair is used.

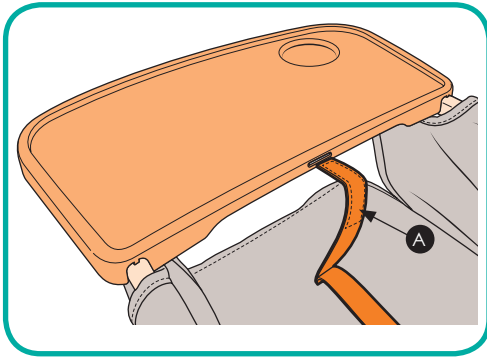

1. Unfasten the seat strap (A) and thread it out from the slot in the tray.

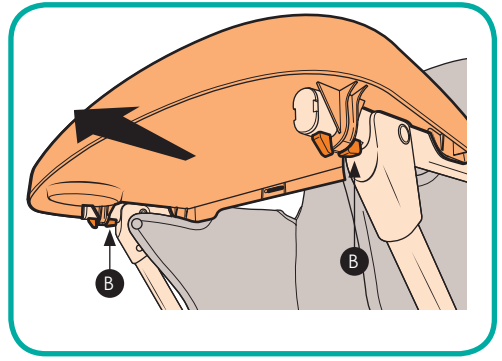


2. Press both red release buttons (B) at the same time and slide the tray off from the highchair.

**IMPORTANT!** Do not press the front most part of the buttons - you will not be able to slide the tray off.

## Reattaching the tray



1. Line up the plastic tabs (A) at the back of the tray with the slots (B) in the highchair armrests.

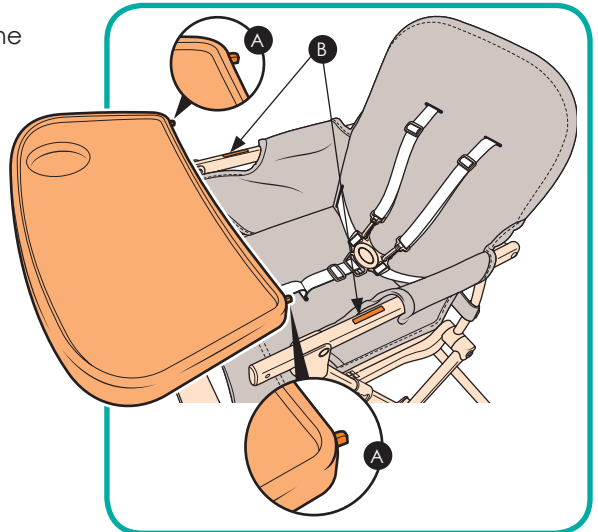



## Reattaching the tray (continued)

1. Insert the tabs into the slots and push the tray onto the arms until it clicks in place.

**WARNING! Check BOTH plastic tabs are properly located in the slots. If not, remove the tray and reattach again.**

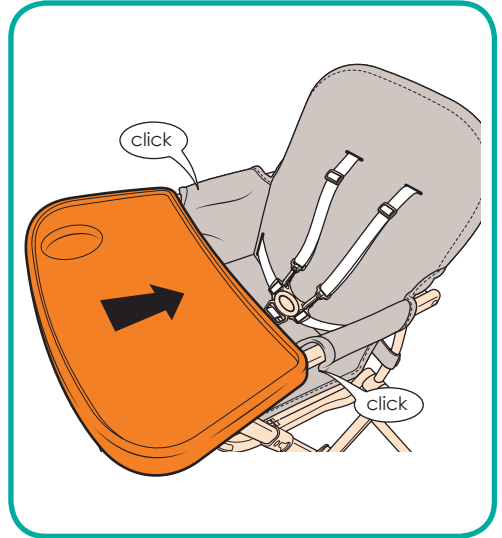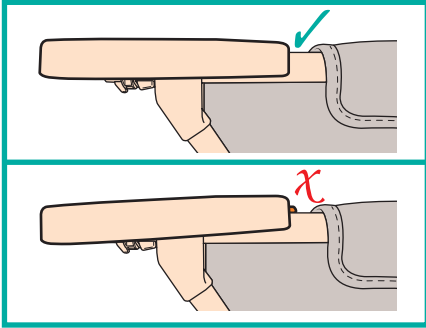

## Folding the highchair

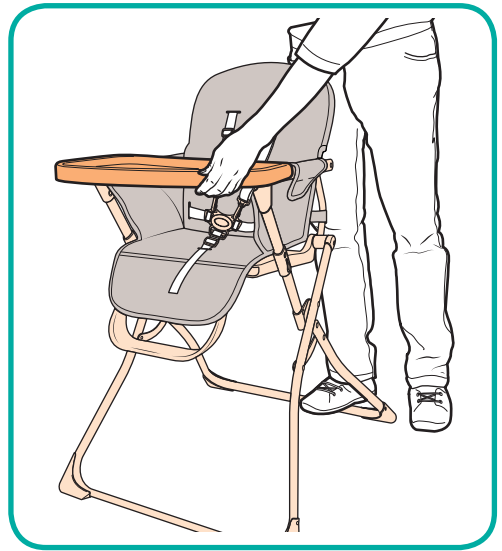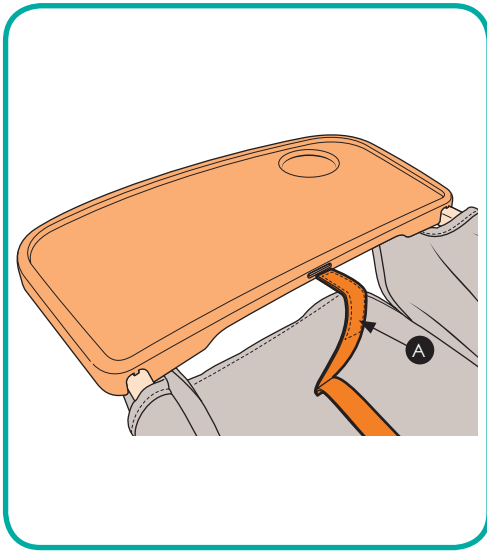


1. Unfasten and remove the tray strap (A).

2. Stand behind the chair with one of your feet placed on the highchair's back foot and with one hand placed on the tray.



## Folding the highchair (continued)

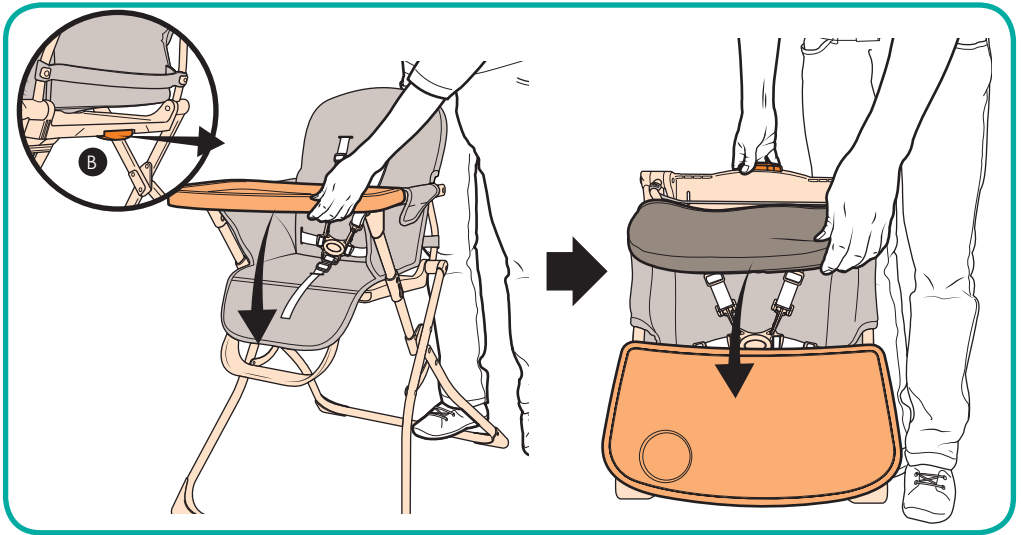

3. With your other free hand, pull the fold release lever (B) on the underside of the seat base and push the tray forwards and downwards towards the highchair feet until fully folded.

## Care and maintenance

- Avoid placing the highchair in direct sunlight for extended periods. Over time this will cause fabrics and paints to fade.
- Clean the seat fabric using either a dry or damp cloth. Do not soak the seat fabric or attempt to wash by hand or by machine.
- DO NOT Iron or expose the seat fabric to strong heat.
- The feeding tray can be wiped clean using a damp cloth and mild disinfectant or can be removed and washed by hand using a mild detergent.
- The highchair frame can be cleaned using a damp-wet cloth with warm water and a mild detergent.
- A mild disinfectant can be used if desired. Stubborn marks maybe removed with a NON-abrasive cleaner.
- The highchair must be dried thoroughly before using or storing.
- NEVER clean any part of the highchair with abrasive, ammonia based, bleach based or spirit type cleaners.
- Apply a small amount of light lubricant such as WD40 to any of the moving parts of the highchair as required, but be careful not to get any on the fabric as it may stain, wipe off any excess lubricant.







[www.mychild.co.uk](http://www.mychild.co.uk)

Customerservice@kooltrade.co.uk  
Imported by Kooltrade Ltd. M34 3QA  
Tel: 0161 335 2508