 




# Grow With Me 3-in-1 Activity Centre Instruction manual

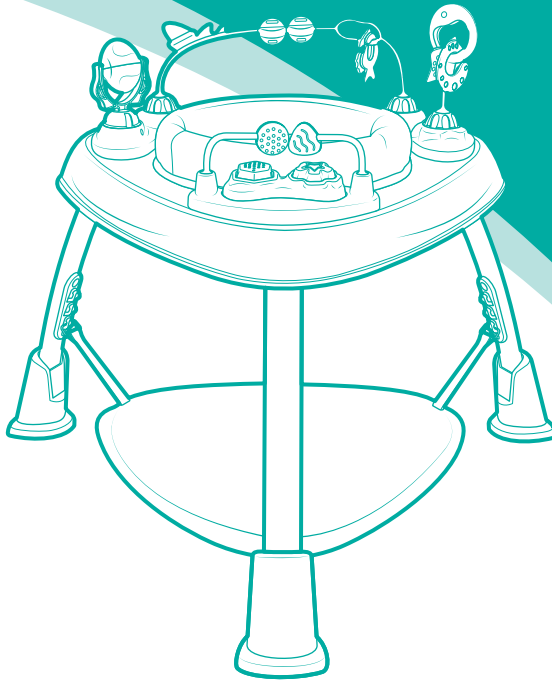

## **INSTRUCTIONS: IMPORTANT! KEEP FOR FUTURE REFERENCE.**

The child may be hurt if you do not follow these instructions. Suitable for children who can sit up unaided, approximately from 4 months. It is not intended for children who can walk by themselves and weigh more than 11kg.

## Safety instructions



**Warning:** Adult assembly required.

**Warning:** Not to be used by children over 36 months. Due to insufficient strength.

**Warning:** Use the activity centre only if your child meets all of the following conditions:

- Your child is at least 4 months old and less than 36 months old.
- Your child can sit up unaided.
- Your child is less than 76.2cm tall.
- Your child weighs less than 11kg.

**Warning:** DO NOT place children who can stand or walk on their own in the activity centre.

**Warning:** Do not use the activity centre in dangerous conditions or situations.

**Warning:** NEVER leave the child unattended in the activity centre. ALWAYS keep child in view while child is in the product.

**Warning:** NEVER move the activity centre while the child is in the seat.

**Warning:** It can be dangerous to allow other children to play near the activity centre.

**Warning:** Strings can cause strangulation! DO NOT place items with string around child's neck, such as hood strings or dummy cords. DO NOT suspend string over the product or attach strings to toys or place near curtain blinds cords or other hanging cords. Do not add any strings or straps to any part of the activity centre.

**Warning:** DO NOT use any parts other than those supplied or recommended by the manufacturer.

**Warning:** Only use with the footpad/table top attached.

**Warning:** Only place your child in the activity centre if the seat unit is attached.

**Warning:** DO NOT place the activity centre on an elevated surface or near steps or stairs. A child's movement can slide the activity centre.

**Warning:** To avoid the activity centre toppling over, place it on a flat, level floor. Adjust the footpad so that is level before placing child in the product.

**Warning:** For INDOOR use only.

**Warning:** Do not use the product if any of the toys, seat or structural parts are damaged. Remove the child immediately if you find any small loose parts or sharp/broken parts.

**Important:** Care should be taken in unpacking and assembly.

**Important:** Examine product frequently for damaged, missing, or loose parts.

## Battery warnings

Only use the recommended batteries observing correct voltage and size.

Always take care to insert your batteries correctly, observing the plus and minus marks on the battery and appliance.

Do not mix new and used batteries.

Do not mix different types of batteries.

Always remove batteries (whether they are dead or not) if you are not going to use the product for long periods (as batteries may leak and cause damage).

Never attempt to re-charge ordinary (non-rechargeable) batteries.

Remove rechargeable batteries before attempting to charge them.

Do not short-circuit the supply terminals

Batteries should always be changed by an adult.


Keep batteries out of reach of children.

Children can choke on batteries. If swallowed seek medical advice immediately.

## Battery disposal

The crossed out wheellie bin symbol indicates that the product must not be disposed of with other household waste. Do not treat batteries (old or new) as household waste. Never dispose of batteries in a fire this may cause them to explode.

Batteries (old or new) should be disposed of by taking them to a designated collection point or recycling facility.

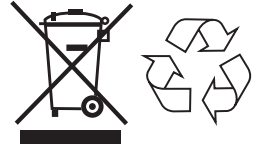

## Your 3 year warranty

Whilst we make and test our products to the highest standards of durability there's always a small chance of a hiccup! Our promise is to repair, replace or refund a MyChild product that has an identified manufacturing defect from the date of purchase for a full 3 years thereafter at no extra cost.

However, you must register within 28 days of the date of purchase to receive the full 3 years guarantee!

To receive your full guarantee you can register your product by: visiting [www.mychild.co.uk/warranty.html](http://www.mychild.co.uk/warranty.html) and complete the warranty form, or by telephone on 0161 335 2508.

## Welcome


Thank you for purchasing the MyChild Grow With Me 3-in-1 Activity Centre. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Your child's safety is your responsibility. If you have a query with this product or require replacement parts, please contact the MyChild Helpline on 0161 335 2508.

Lay out the parts on a soft level surface and compare to the part/fixings checklist below. Do not discard any packaging until you are sure that you have all the parts.

**WARNING!** Assembly by an adult. Keep away from children until fully assembled. Keep children clear during assembly as pack contains small parts which may present a choking hazard.

# Parts checklist

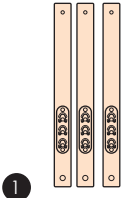


1




2

Contained in your carton are:


Nº	Part	Qty
1	Legs	3
2	Feet	3
3	Footpad/table top	1
4	Seat fabric	1
5	Seat unit *	1
6	Platform	1
7	Musical toy tray	1
8	Musical toy	1
9	Toy trays	2
10	Toy bar (large)	1
11	Toy bar (small)	1
12	Toy bases	4
13	Bubble toy	1
14	Spinning toy	1
15	Teethers	4

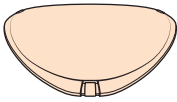


3

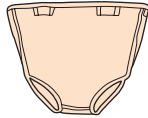

4

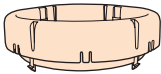


5

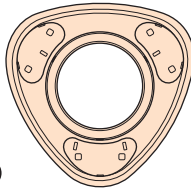

6


\*Comes attached to platform (6)

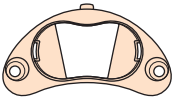


7




8

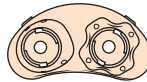


9

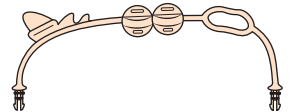

10

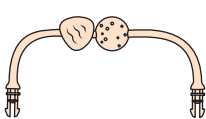


11

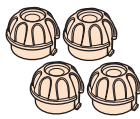


12



13

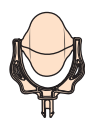

14

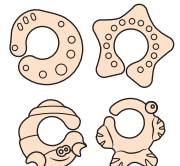


15

You will require one Phillips screwdriver (not supplied).




## Detach the seat unit from the platform

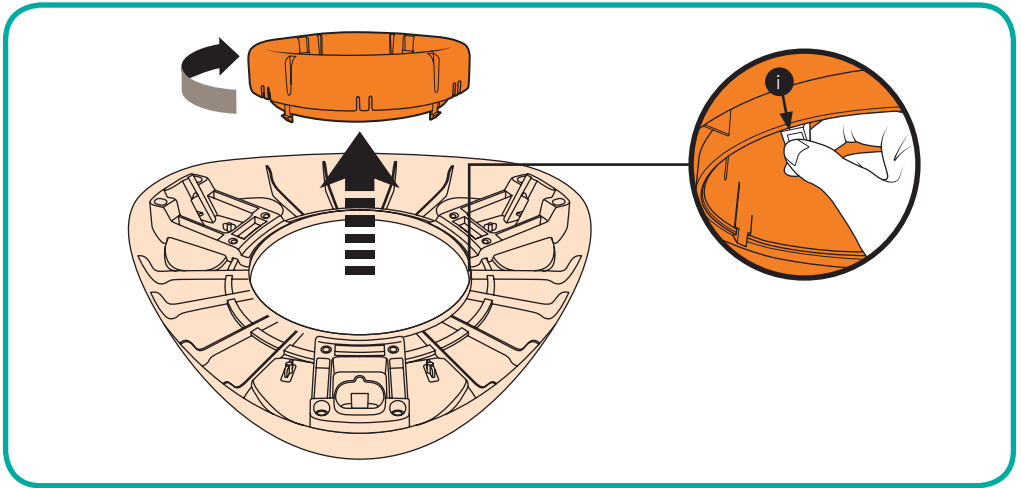


1. Press the clips (i) on the underside of the seat unit whilst lifting and rotating the seat unit.

## Assembling the legs and platform

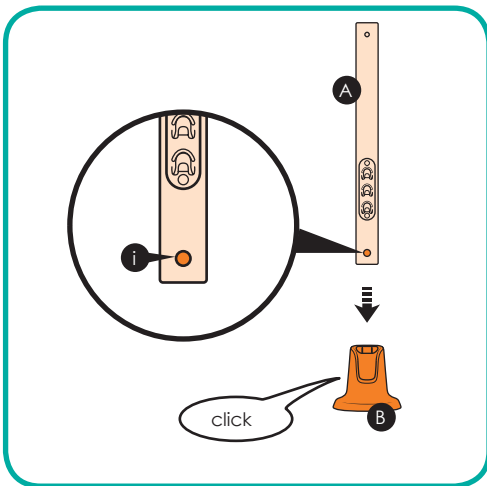


1. Locate the round hole (i) at one end of the leg and insert the leg (A) into foot (B) ensuring the parts click together. Repeat for the remaining legs and feet.

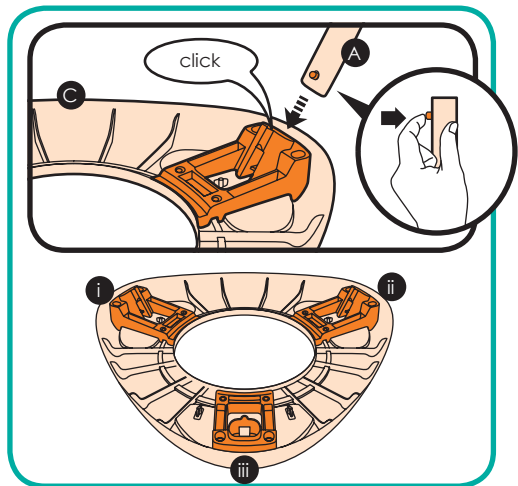


2. With platform (C) upside down on the floor, attach legs (A) to the underside of platform at points (i), (ii) and (iii) as shown ensuring the spring pins click and lock into place.

## Footpad assembly

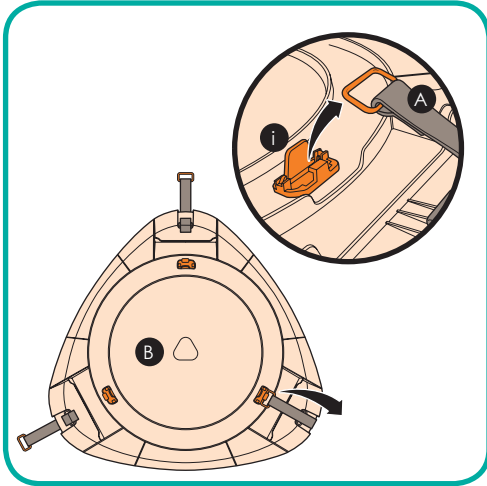


1. Remove the 3 straps (A) from their storage positions (I) on the underside of the footpad/table top (B)

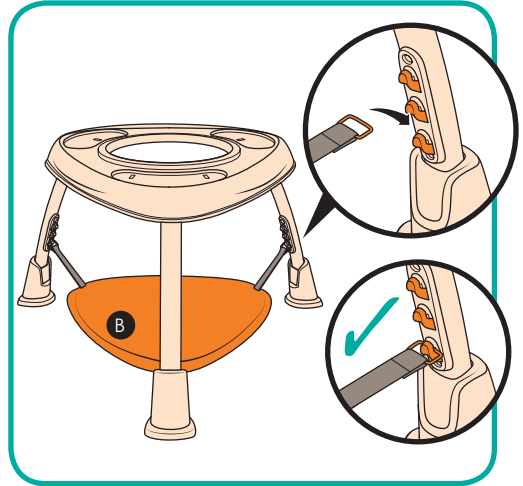

2. Place footpad (B) under the activity table and hook the straps on to the legs ensuring all straps are at the same height

## Adjusting the footpad height

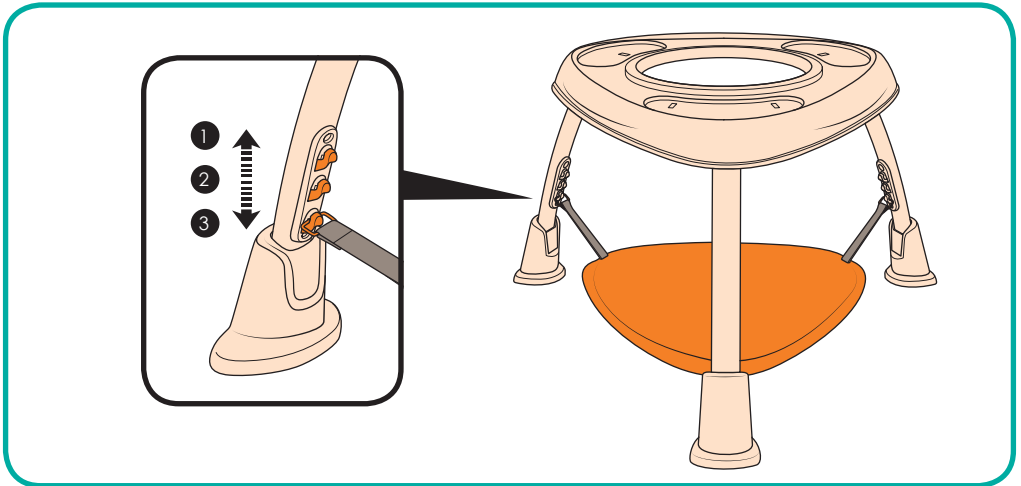


1. Unhook each strap and re-hook at the desired position.

**Note:** Ensure the footpad straps are all set at the same height before use.


**WARNING:** DO NOT adjust the height whilst a child is seated in the activity centre.

## Seat unit assembly


**ATTENTION:** Children can play inside the activity centre **ONLY** when it is fully assembled.

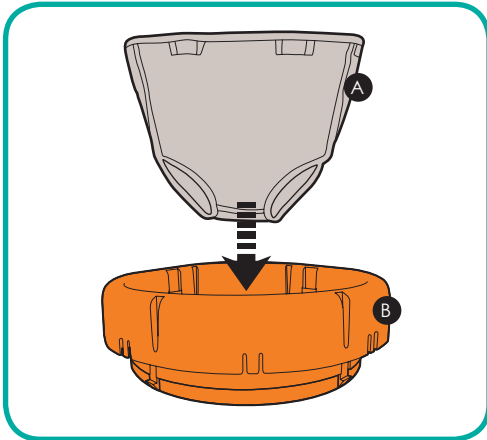


1. Place the seat fabric (A) into the seat unit (B).

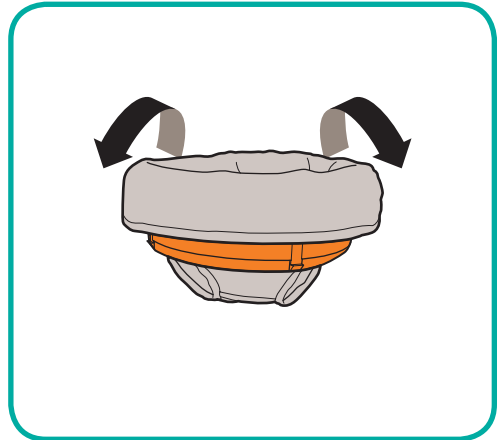

2. Fold the seat fabric over the seat unit.

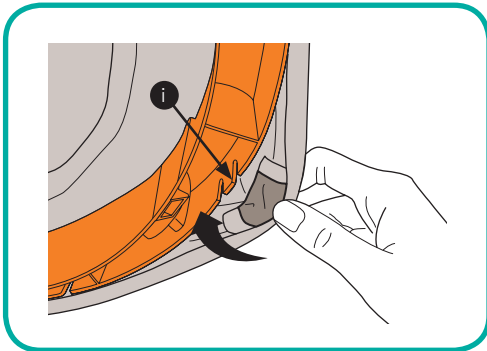


3. Hook the 8 webbing strips on the underside of the seat fabric over the tabs (i) on the seat unit.

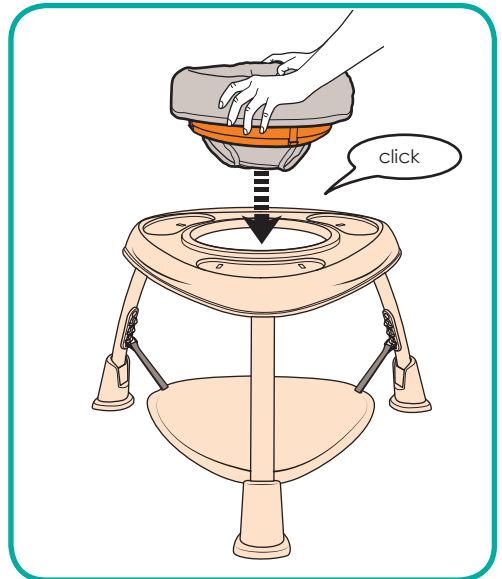


4. Insert the assembled seat unit into the seat tray, pressing it down until it 'clicks' into place.

Check the seat unit is able to rotate fully.


## Musical toy assembly

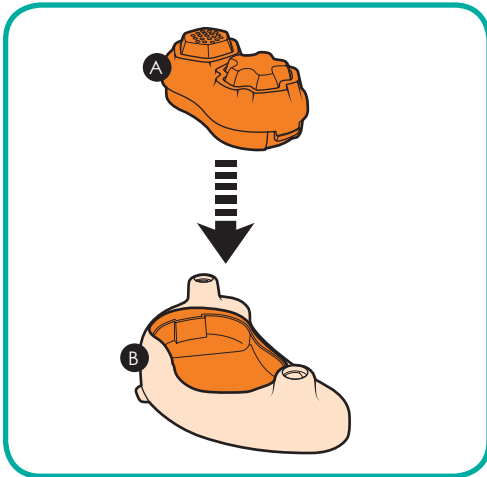

1. Place the musical toy (A) into the musical toy tray (B).

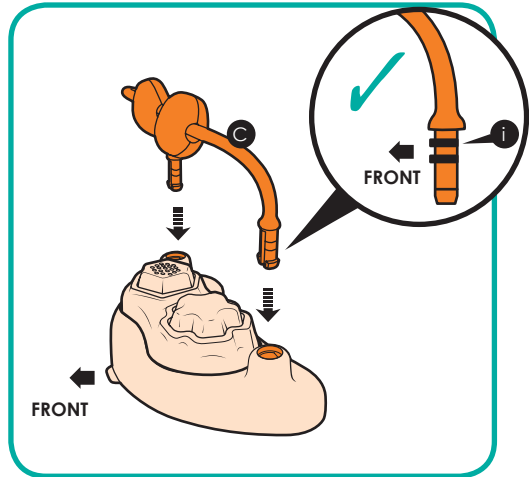

2. Push each end of the small toybar (C) into the two fixing points on the musical toy tray, ensuring the protruding tabs (i) on the toy bar stems are facing to the front of the toy tray.

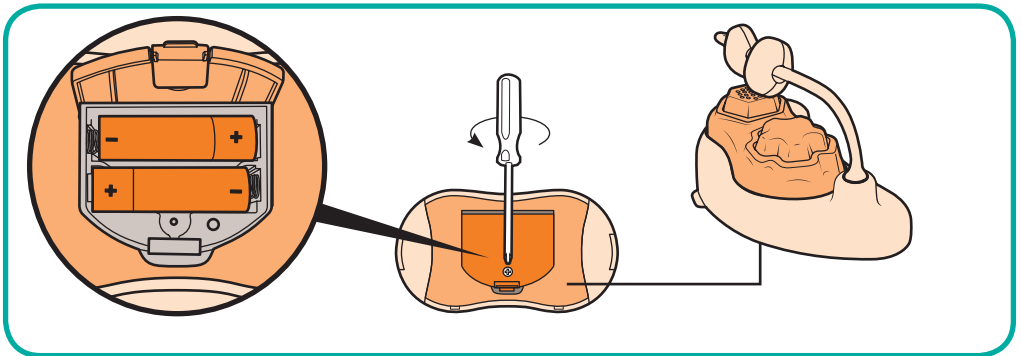


3. Using a Phillips screwdriver, unscrew the battery cover on the underside of the musical play tray. Insert 2 x 1.5V AA batteries (not supplied) ensuring the correct battery orientation is observed and then reattach the cover, replacing the screw, making certain it is not over-tightened.

**ATTENTION:** Refer to 'Battery warnings' on page 2.




## Musical toy assembly (continued)

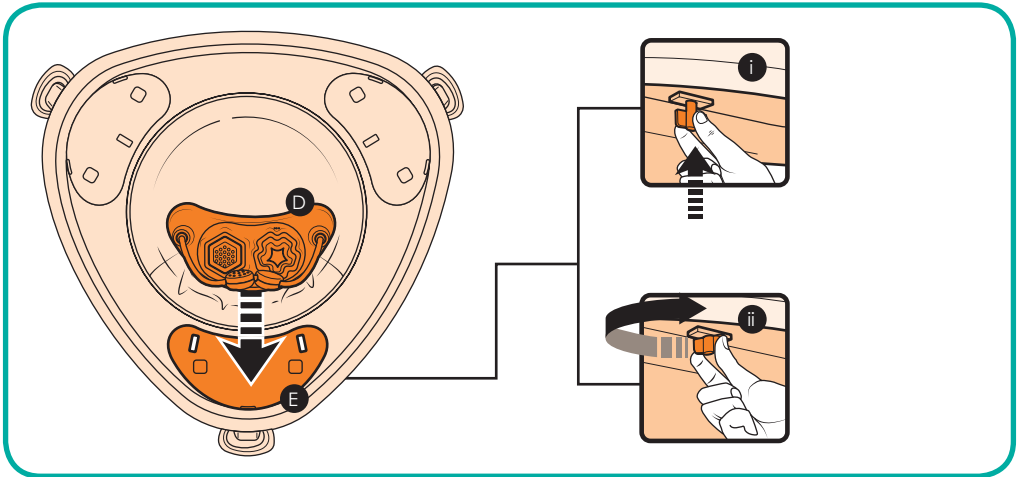

4. Place the musical toy tray (D) into recess (E) with the two white plastic tabs at the front of the platform near the MyChild logo.


On the underside of the platform, push the two plastic tabs up (i) and rotate clockwise (ii) to lock the toy tray in place.

## Large toy bar and toy trays assembly

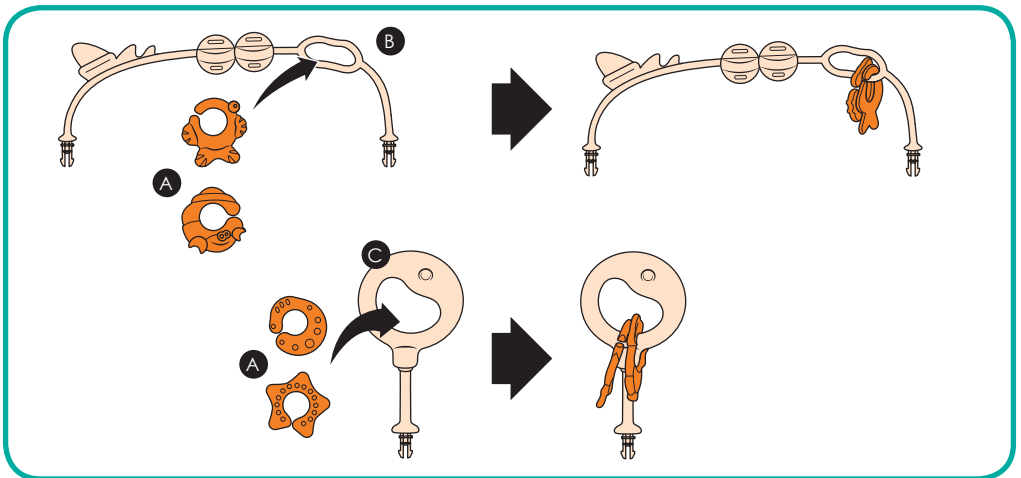


1. Hang two teethers (A) onto the large toy arch (B) and two on the bubble toy (C).

## Large toy bar and toy trays assembly (continued)

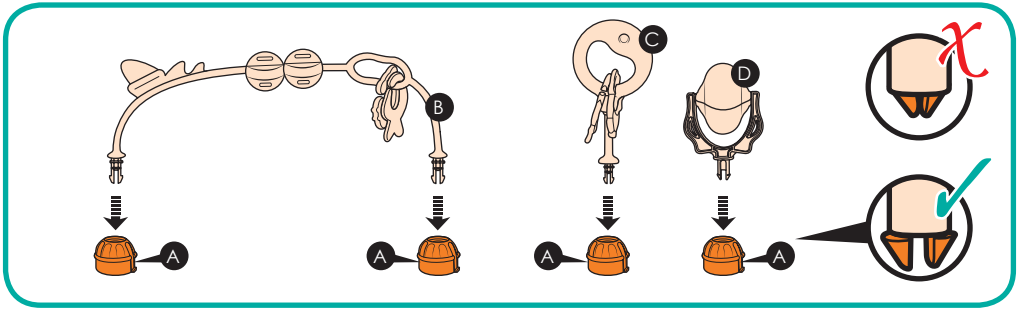



2. Attach a toy base (A) to each end of the large toy bar (B), Bubble toy (C) and spinning toy (D). Pull up on the toy stems to check they are secured to the toy bases properly.

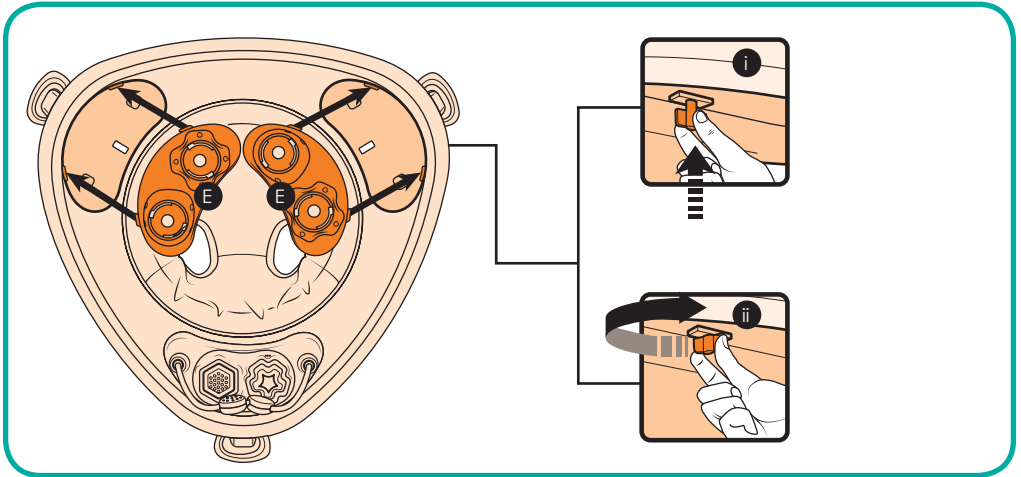


3. Place toy trays (E) into the recesses on the platform. On the underside of the platform, push the plastic tabs up (i) and rotate clockwise (ii) to lock the toy trays in place.

4. Attach the toy arch and bubble toy and spinning toy to the toy trays as shown.

**NEVER use the toy arches to carry the activity centre!**

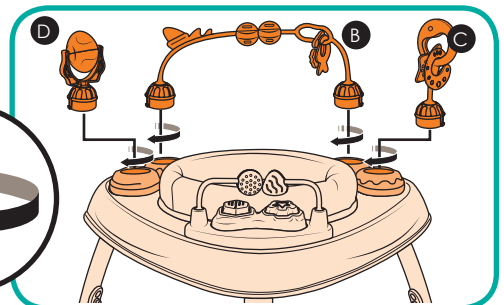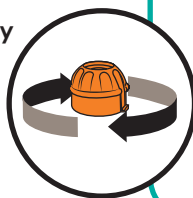


## Converting to play table mode

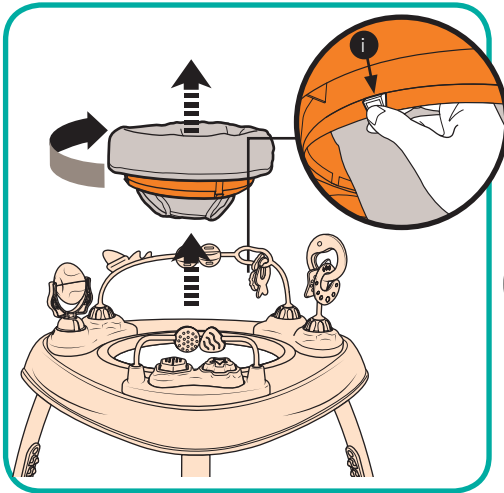


1. Press the clips (i) on the underside of the seat unit whilst lifting and rotating the seat unit.


**ATTENTION:** Children can play inside the activity centre **ONLY** when the footplate has been fully installed into the base.

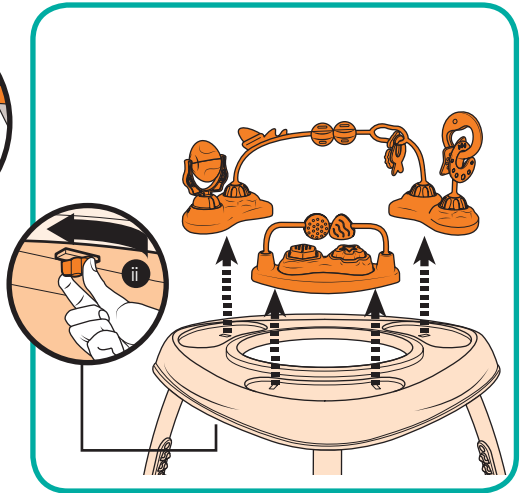

2. Detach the toy trays by turning the locking tabs (ii) anti-clockwise on the underside of the platform and remove the toy trays.

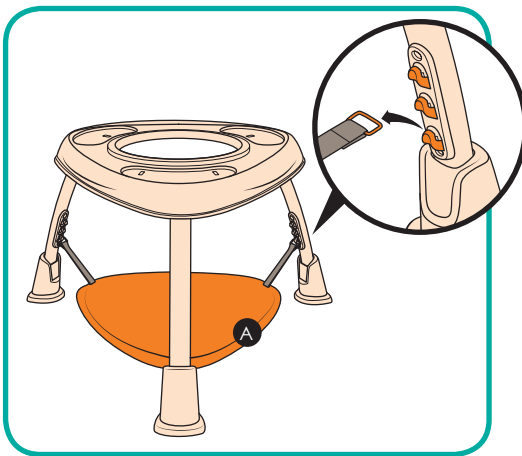


3. Unhook the 3 footpad straps and remove the foot pad/table top (A).

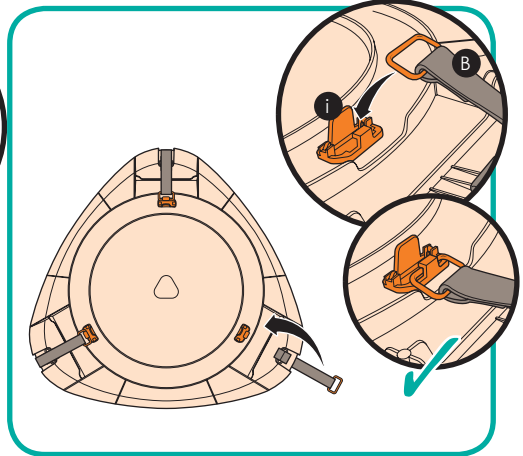


4. Place the 3 footpad straps (B) into their storage positions (i).

## Converting to play table mode (continued)

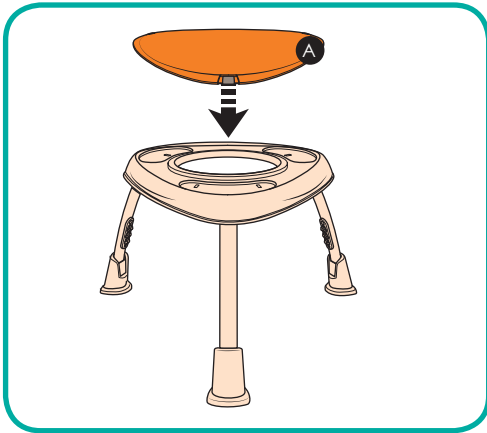

5. Place the footpad/table top (A) on the platform.

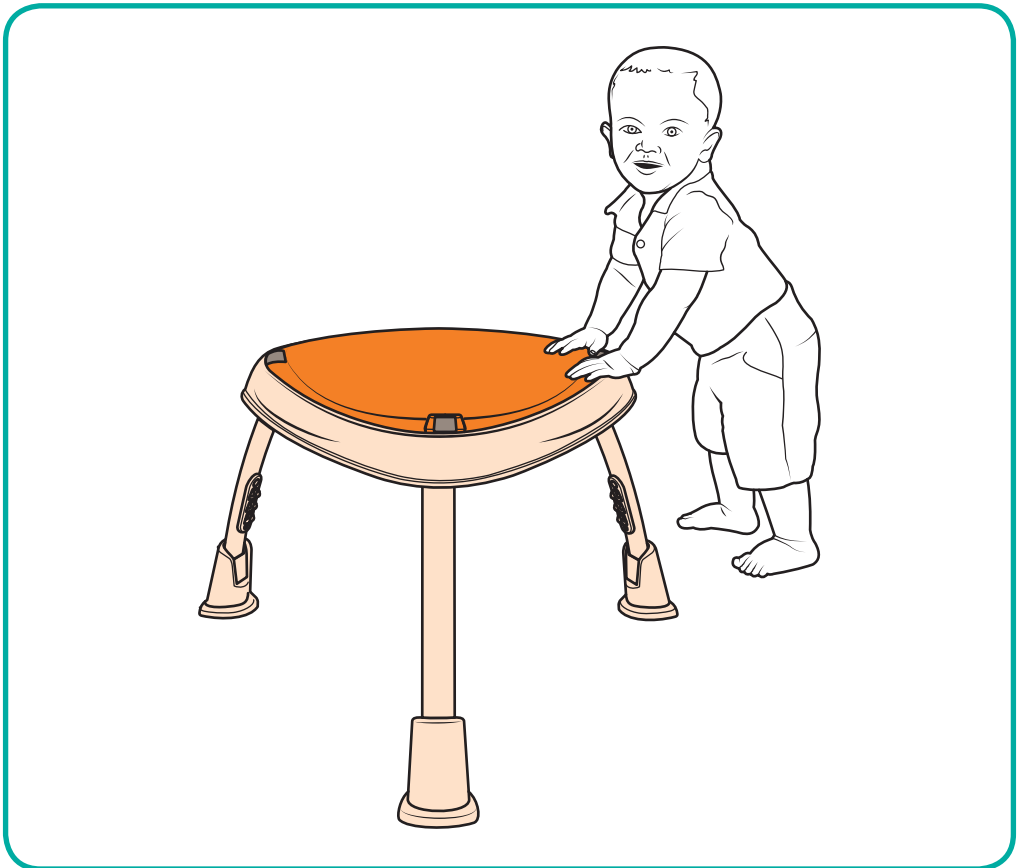

## Care and maintenance

- To prolong the life of your nursery product keep it clean and do not leave it in direct sunlight for extended periods of time.
- Plastic parts can be wiped clean with a damp cloth and mild soap then allowed to air dry.
- DO NOT immerse plastic parts in water.
- Removable fabric covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.
- Do not dry clean, or use bleach.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- Always check parts regularly for tightness of screws, nuts and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.
- Do not use the product if any components are broken or missing
- Regularly clean parts that have been mouthed by your child.







[www.mychild.co.uk](http://www.mychild.co.uk)

Customerservice@kooltrade.co.uk  
Imported by Kooltrade Ltd. M34 3QA  
Tel: 0161 335 2508