


MY CHILD[®]

Nimbus
Stroller

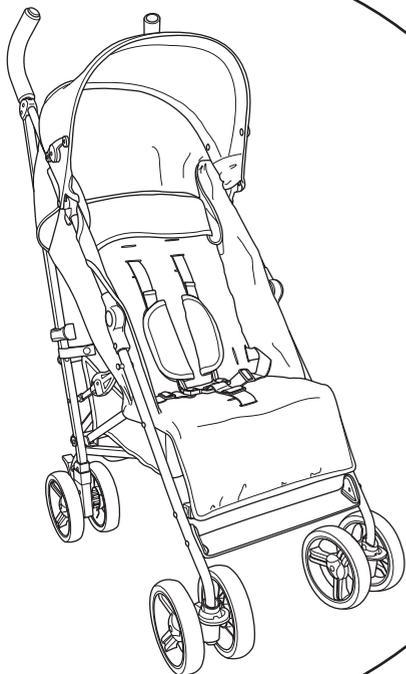

This product is tested to: BS EN 1888:2012

Suitable for children from: BIRTH up to 15kg

INSTRUCTIONS: Please read carefully and keep for future reference. Your child's safety may be affected if you do not follow these instructions

Safety instructions

Important: Read, understand and follow these instructions carefully and retain for future reference

WARNING: To avoid injury ensure that your child is kept away when unfolding and folding this product.

WARNING: Do not let your child play with this product.

WARNING: It may be dangerous to leave your child unattended.

WARNING: Always use the crotch strap in combination with the waist belt.

WARNING: Parcels, accessories and other items (eg hand bags, shopping bags, etc) that are placed on the stroller may cause the stroller to become unstable.

WARNING: Any load attached to the handle affects the stability of the stroller.

WARNING: Do not lift or carry the stroller with a child in it.

WARNING: Do not allow your child to climb unassisted into or out of the stroller.

WARNING: Ensure that children are clear of moving parts before making adjustments.

WARNING: Never leave rain covers, hoods and aprons on indoors or in hot weather as your child might overheat.

WARNING: Do not use replacement parts or accessories other than those approved by the manufacturer as others may render the product unsafe.

WARNING: Do not load the basket with a weight in excess of 2kg.

WARNING: Always apply the brakes when the stroller is stationary.

WARNING: Taking children up or down stairs, escalators, steps, steep slopes or on beaches and muddy/rough terrain could be dangerous and should not be attempted. Remove your child from the stroller for easy carrying to negotiate such hazards, or simply avoid them.

WARNING: Never assume a driver can see you or your child.

WARNING: If your stroller is to be used by someone who is unfamiliar with it, e.g grandparents, then show them how it works before letting them use it.

WARNING: This stroller is not suitable for running or skating.

WARNING: Hold onto your stroller when close to moving vehicles and trains as the draught from the vehicles may move the stroller even with the brakes on.

WARNING: This product is suitable for children from birth to 15kg.

WARNING: This product is designed to carry only one child at a time.

If you have special harness requirements and wish to attach your own harness, then there are 'D' rings provided on the waist harness for the attachment of your alternative harness system. The alternative harness system must conform to BS EN 13210:2004.

Your 3 year warranty

Whilst we make and test our products to the highest standards of durability there's always a small chance of a hiccup! Our promise is to repair, replace or refund a MyChild product that has an identified manufacturing defect from the date of purchase for a full 3 years thereafter at no extra cost.

However, you must register within 28 days of the date of purchase to receive the full 3 years guarantee!

To receive your full guarantee you can register your product by: visiting www.mychild.co.uk/warranty.html and complete the warranty form, or by telephone on 0161 335 2508.

Welcome

Thank you for purchasing the MyChild Nimbus Stroller. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Your child's safety is your responsibility. If you have a query with this product or require replacement parts, please contact the MyChild Helpline on 0161 335 2508.

Lay out the parts on a soft level surface and compare to the part/fixings checklist below. Do not discard any packaging until you are sure that you have all the parts.


WARNING! Assembly by an adult. Keep away from children until fully assembled. Keep children clear during assembly as pack contains small parts which may present a choking hazard.

Care and maintenance

- This product requires regular maintenance: Inspect the locking devices, brakes, harness assembly, catches, seat adjustments, joints and fittings to ensure they are secure and in full working order. Brakes and wheels are subject to wear and should be replaced if necessary by contacting customer service.
- If any part of your pushchair becomes stiff or difficult to operate, ensure that dirt is not the cause. Use spray lubricant (silicone based) between the components. Avoid over-spraying as this may encourage the accumulation of dirt. Regular lubrication of moving parts will extend the life of your pushchair and make opening and folding easier.
- The seat unit, plastic and metal parts must be sponged clean with warm water and mild detergent. Always allow to dry thoroughly before using or storing.
- Do not leave the pushchair in sunlight for prolonged periods as fabrics may fade.
- Never use abrasives, ammonia, bleach or spirit based cleaners.
- Always store your pushchair in a dry place. Allow fabric and raincover to dry thoroughly before folding and storing.

Parts checklist


1

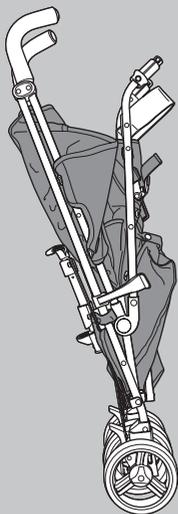

Contained in your carton are:

Nº	Part	Qty
1	Chassis	1
2	Front wheels	2
3	Hood	1
4	Harness pads*	2
5	Basket*	1
6	Raincover	1

*These are pre-fitted but are removable

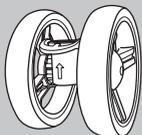


2




3



4

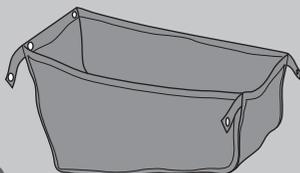


5

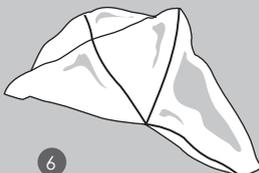


6


Opening the pushchair

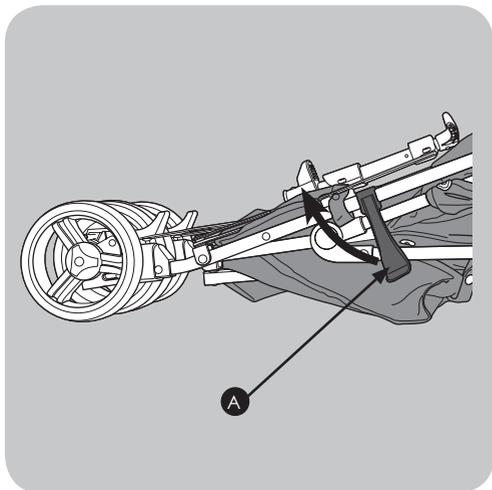

1. Release the folding lock by lifting the lock off the peg (A).

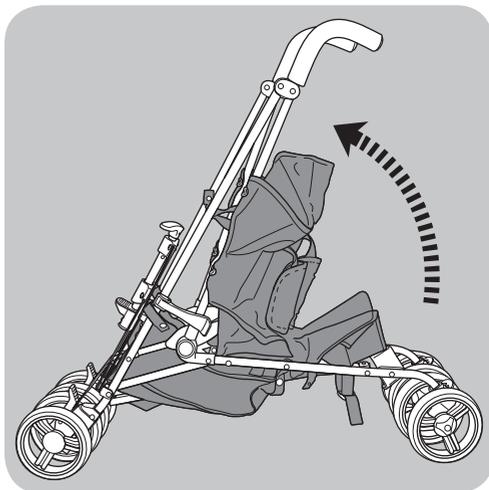


2. Raise both handles as far as they will go.

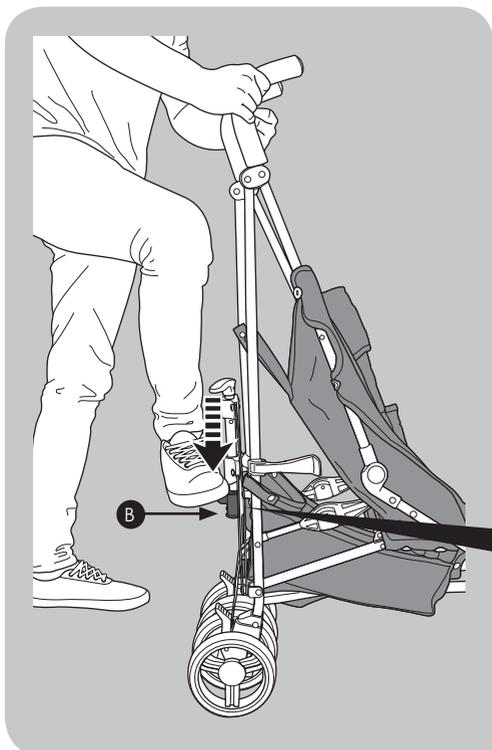


3. DO NOT try and open the pushchair by forcing the handles apart. Place your foot on the frame 'LOCK' pedal (B) and push down until the frame is fully open and locked.

Attention: Ensure the calfrest is down before allowing the child to get in or out.

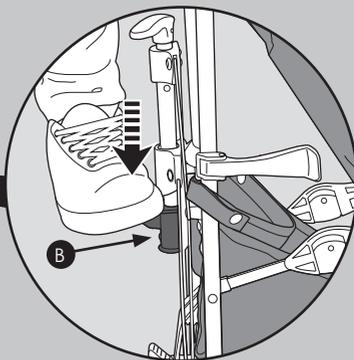

Front wheel assembly

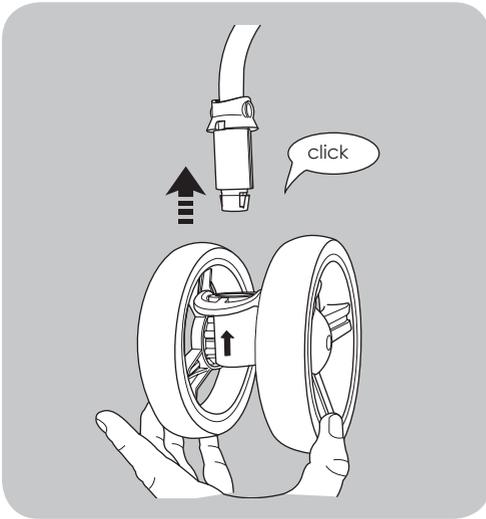


1. Align the front wheel assembly with the front axle. Push each wheel assembly firmly on until they click into place. Pull the front wheel to make sure it is attached.

NOTE: Check the wheel to make sure it is secure by pulling it.


Note: Wheels are designed not to be removed.

Using the swivel/lock function

WARNING: Always lock the swivel wheels when using the pushchair on rough surfaces.

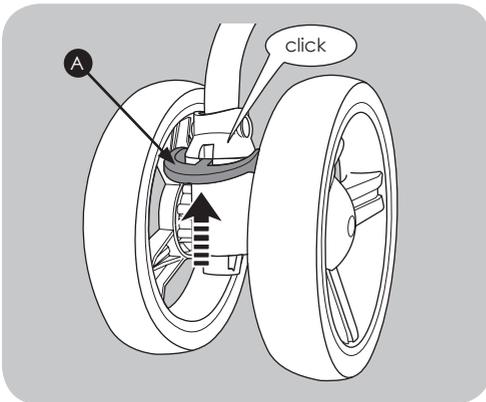


1. **To lock the wheel:** Position the wheel in the trailing position with tab (A) pointing forwards and lift the swivel lock tab (A) up.

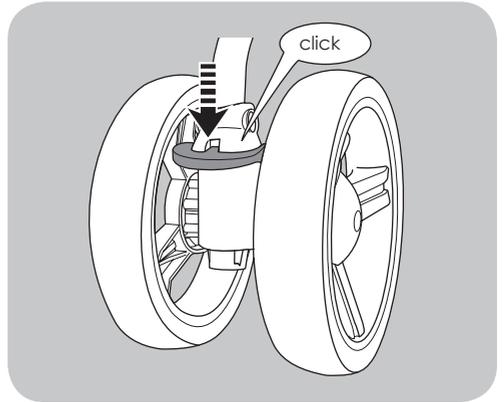


2. **To allow the wheels to swivel:** Push the swivel lock tab (A) downwards.

Using the brakes

WARNING: The brakes MUST always be ON when making adjustments, e.g. taking the child out, putting the child in or letting go of the handlebars.

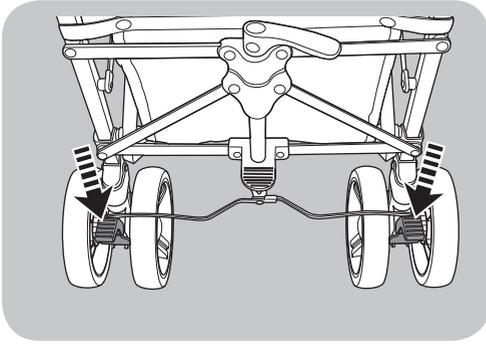

1. Press down on either of the brake levers with your foot to apply the brake. Give the stroller a push back and forward to make sure the brakes are engaged before letting go of the handles.

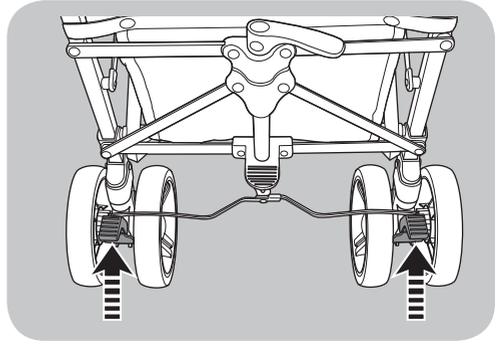


2. Pull either of the brake levers up with your foot to release the brakes.

WARNING! Make sure you are holding the handles before releasing the brakes.

Using the harness


WARNING: Ensure harness is correctly fitted at all times.

Adjust the sliders on the waist and shoulder straps so that the harness fits snugly.

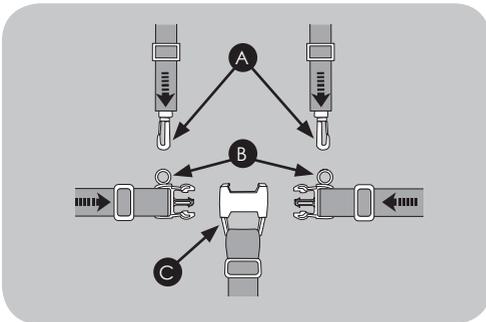


1. To lock: Clip the shoulder harness strap clips (A) onto the loop of the waist strap connectors (B).

Push the waist strap connectors (B) into the buckle (C) until they CLICK into place.

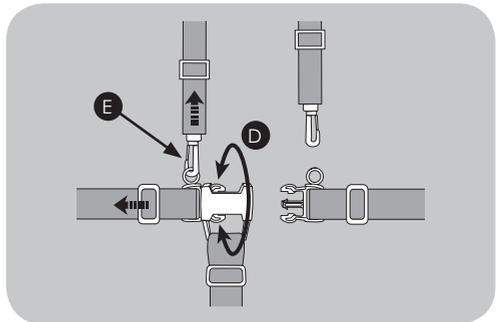


2. To release: Squeeze the top and bottom of the waist band connector (D). The shoulder straps can be unclipped from the waist straps if necessary (E).


Adjusting the shoulder harness position

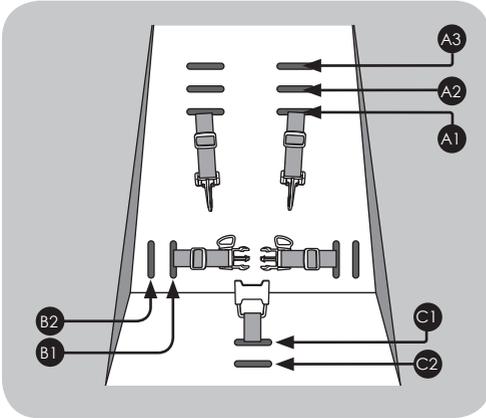

1. The rear seat unit is suitable from birth. There are 3 pairs of shoulder harness height positions (A1, 2 & 3), two pairs of waist harness positions (B1 & 2) and two crotch strap positions (C1 & 2). Select the harness positions that will allow you to adjust the harness appropriately to suit your child's age and size.

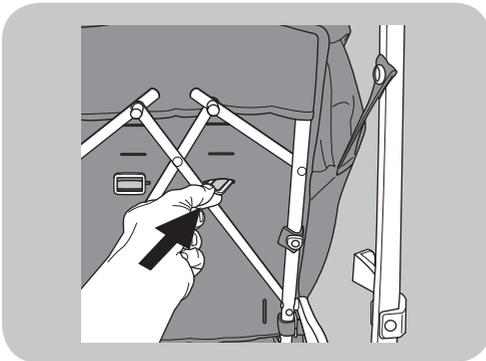

2. To adjust the shoulder harness position, release the shoulder strap from the main harness buckle as shown on page 6, 'Using the harness'. Feed the shoulder strap retainers from the rear of the seat through to the front of the seat.

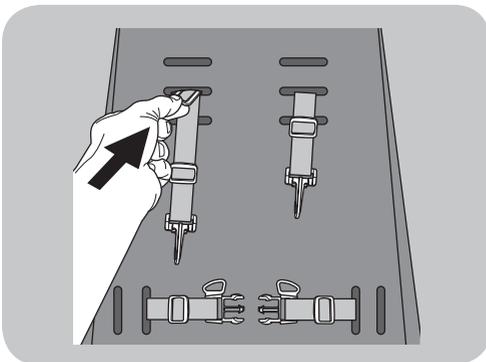


3. Thread the retainers from the front of the seat, back through to the rear of the seat at the desired height position. Repeat the same actions for the other shoulder strap, so both straps are at the same height. To ensure the strap is fitted correctly and secure, pull the strap up sharply.


Attention: The shoulder straps can be completely removed from the pushchair when adjusting the position. Give them a tug to ensure they are secure before use.

Adjusting the waist harness position

To adjust the waist harness you will need to undo the webbing from the frame, pass it through the seat, reposition it and reattach the webbing.

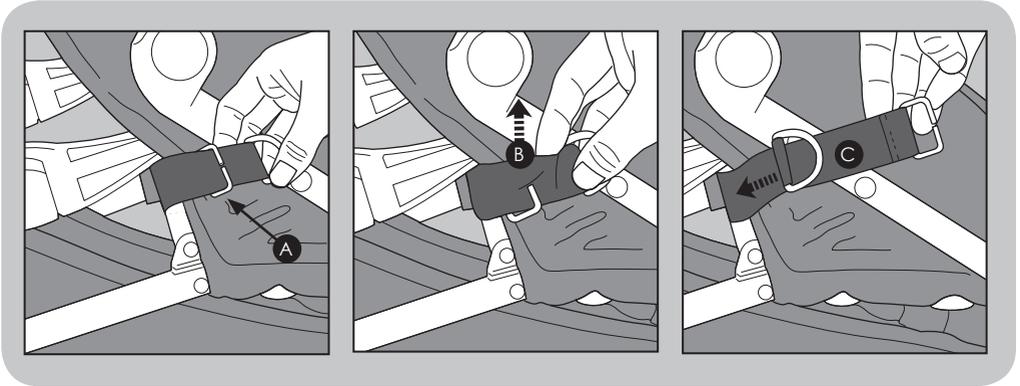


1. Locate the split ring (A) for the waist harness at the back of the seat.
2. Remove the webbing (B) from the split ring.
3. With the webbing removed from the split ring, pass the waist strap (C) back through the seat.

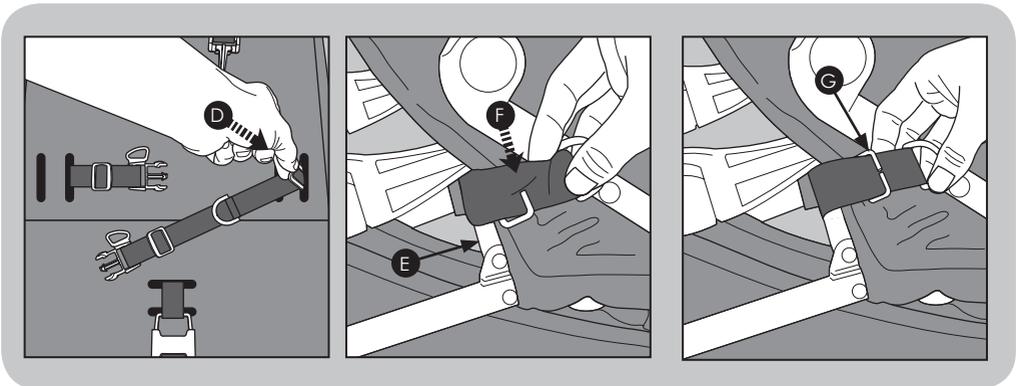

4. From the front of the seat, feed the split ring through the desired button hole (D).
5. Loop the webbing around the frame (E) and feed the webbing back into the split ring (F).
6. Check that the webbing has been properly fed into the split ring (G).

ATTENTION: Ensure the straps are secure and properly adjusted to suit your child before use.


Adjusting the crotch strap position

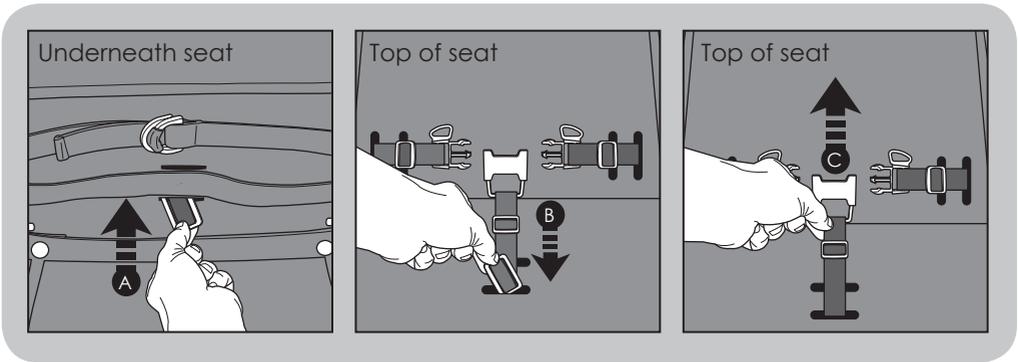

1. The crotch strap can be adjusted by locating the buckle underneath the seat unit (A).
2. Thread the buckle through the button hole (B). Thread the buckle back through so it is underneath the seat unit.
3. Tug the strap to ensure it is fitted securely (C).

Warning: The crotch strap can be completely removed from the stroller when adjusting the position. Please ensure it is fitted securely before use.


Adjusting the backrest

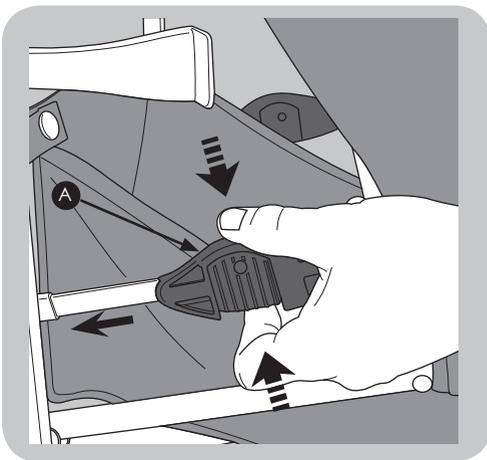

1. **To recline:** Squeeze both of the recline mechanisms on either side of the stroller (A) and push them backwards. The seat has 5 positions of recline.


To raise: Simply push up/lift the backrest.

Adjusting the calfrest

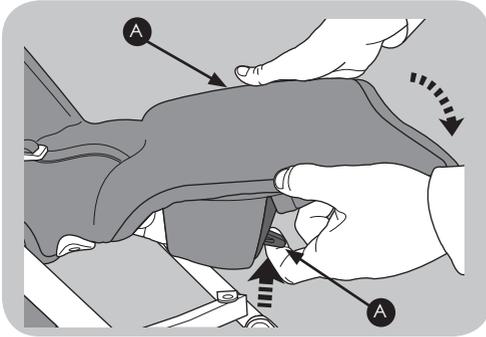

ATTENTION: Ensure that the calfrest is folded down when the child is getting in and out of the stroller. Failure to do so may cause damage to the mechanism.


1. To lower the calfrest, press the buttons (A) on each side of the calfrest and lower the calfrest.

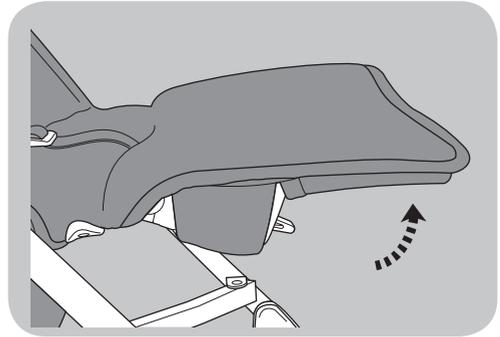


ATTENTION: When the calfrest is up, it allows the child to lie in a more horizontal position when resting or sleeping. It is not designed to take the weight of the child climbing in and out of the stroller.

2. To raise the calfrest simply lift the calf rest upwards (there is no need to press the buttons whilst raising the calfrest).

Attaching/Using/Removing the hood

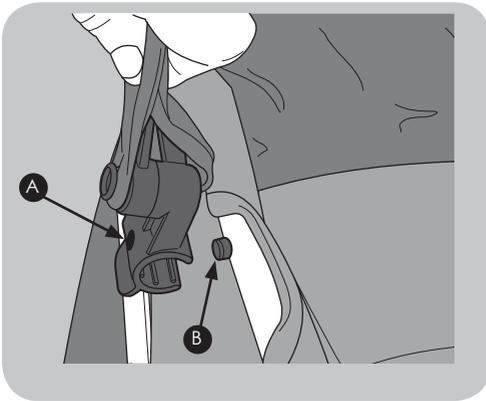


1. Line up the hood clips so that the hole (A) lines up with stud (B) on the chassis and push the clip onto the frame.

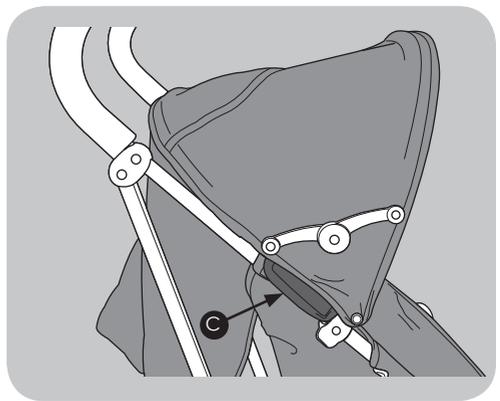


2. Secure the hood fabric to the pushchair using Velcro tabs (C); repeat on opposite side of hood.

Attaching/Using/Removing the hood (continued)

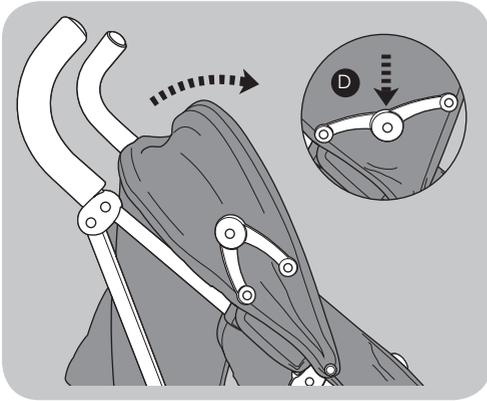

3. To open: Pull the front of the hood forwards, then press down on the hinges (D) to lock the hood open.

To close: Lift the hinges and fold the hood back.

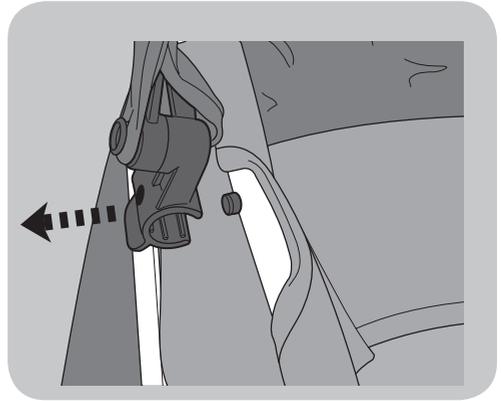

4. To remove: Unfasten the hood's Velcro tabs. Pull the clip off sideways as shown.


Attaching the raincover




1. Fully open your raincover. With the hood on the stroller open, place the raincover over the stroller hood lining up the seams and secure all fastenings.

Folding the pushchair

WARNING! Fold the hood back before attempting to fold the pushchair.
Failure to do so may damage the hood.

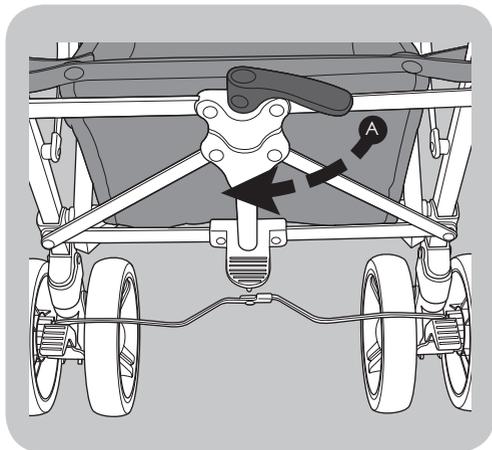


1. Turn handle (A) to the left as shown.

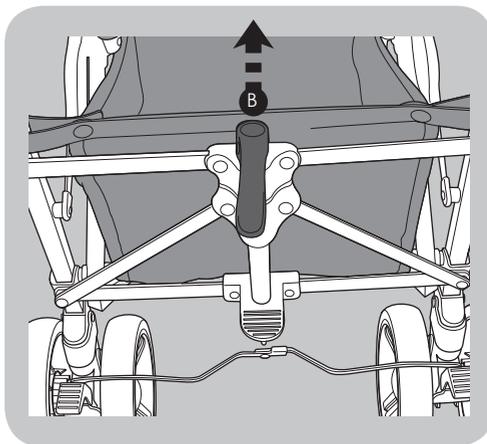

2. Pull the handle upwards (B) and begin to fold the pushchair forwards.



3. Hold both the handles and gently fold the stroller forwards (C) until it is fully folded. Do not force it down. If it does not go down then check for obstructions and repeat actions in steps 1 & 2 above.

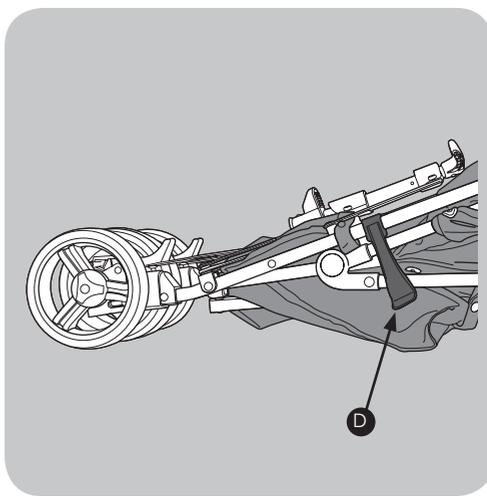

4. Secure the storage lock (D).



Customerservice@kooltrade.co.uk
Imported by MyChild. M34 3QA
www.mychild.co.uk
Tel: 0161 335 2508