


MY CHILD[®]

Easy Twin

Group 0+ car Seat

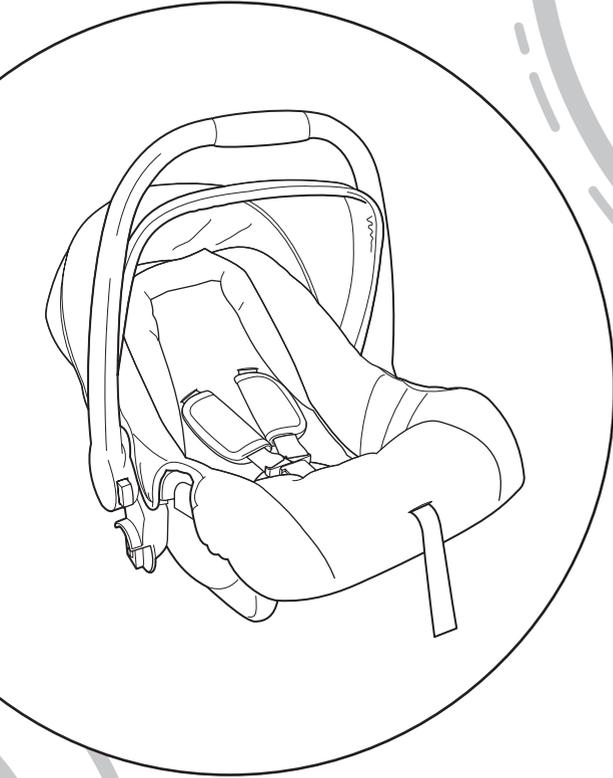

This product conforms to ECE R44.04

Group 0+ infant carrier.

Suitable for children from 0kg to 13kg (approx birth to 18 months)

Instructions: Please read carefully and keep for future reference. Your child's safety may be affected if you do not follow these instructions.

Safety advice

WARNING: The correct fitting of the vehicle seat belt (following the guide markings) is of vital importance for the safety of your child. See the labels on the seat itself.

WARNING: Keep these instructions with the infant carrier for future reference.

WARNING: Never leave your child unattended.

WARNING: NEVER use the infant carrier on a passenger seat that is fitted with a front airbag.

THIS CAN BE VERY DANGEROUS.

- The product is only safe if it is used in strict accordance with these instructions.
- The product must only be used on forward facing passenger seats which are fitted with automatic 3-point safety belts which are approved to ECE R16 or equivalent.
- The product may be used on a front or rear passenger seat but we recommend that it is fitted on the rear passenger seat.
- The product must be replaced if it is involved in an accident as it may have unseen damage.
- Do not use this product second hand as you do not know its history.
- Ensure that all other passengers, luggage and loose objects are properly secured.
- Do not lubricate any of the moving parts.
- It is recommended that the infant carrier should not be used more than 5 years from the date of production as the product may deteriorate due to, for example, ageing of the plastic.
- Never use the infant carrier without the covers. Only covers approved by the manufacturer may be used.
- The infant carrier must be secured with the vehicle seat belt when not in use.
- Ensure that the infant carrier is not damaged by heavy objects or being caught in the car door.
- Never make unauthorised alterations to the product.
- Infant carrier parts may become hot in direct sunlight. Cover with sheet to prevent this.
- Most accidents occur on short trips, so do not be tempted to avoid using the infant carrier simply because you are not travelling very far.
- Do not leave the child in the infant carrier for long periods of time. Take regular breaks on long journeys.
- Set a good example by always wearing a seatbelt yourself.
- Make sure that your child never plays with the buckle.

WARNING: Failure to follow each of the following instructions can result in your child striking the vehicle's interior during a sudden stop or crash.

WARNING: Take care that the straps holding the infant carrier to the vehicle, are as tight as possible. Make sure that the straps restraining the child are adjusted to the child's body and the straps are not twisted.

WARNING: The child restraint system **MUST BE CHANGED** after it has suffered from a violent impact in an accident.

Airbag warning



! Extreme Danger !

Do not use a rear facing infant carrier on a front passenger seat where an active passenger air bag is fitted. The air bag inflates rapidly and can throw a rear-facing infant carrier into the back of a passenger seat with great force, which can injure or kill a child.

Vehicle seat belt

The product must only be used with a 3-point vehicle seat belt that has been approved to ECE R16 or equivalent. **NEVER** use a 2-point seatbelt. Your infant carrier can be fitted in most cars. However, some cars are designed so that proper installation is not possible. In this case, try another seat.

Vehicle seat travelling advice

In order to maximise the protection that the infant carrier can give your child, please adjust the harness so that it fits snugly and make sure that the infant carrier is fitted correctly.

Research shows that correct installation is the most important factor in infant carrier safety.

Please take the time to read the instruction manual carefully.

Our product offers maximum protection when it is used in accordance with the instructions.

If you have any questions concerning the use of the product please do not hesitate to contact us.

- This infant carrier is designed for use for children whose weight is 13kg or less and whose heights are 66cm (26 inches) or less.
- This infant carrier must only be used in a rear facing position, and must **NEVER** be used forward facing. For maximum protection, the centre rear seat position (if it is fitted with an adult 3-point seat belt) is recommended as the safest position in most vehicles for installing an infant carrier. (Only use the vehicle's rear centre seat if the vehicle seat is fitted with a 3-point adult belt).
- Do not use your infant carrier on a vehicle seat with lap belts only.
- Your infant carrier should not be purchased or sold as a second hand item.
- Remove child out of the car as first priority in an accident.
- While travelling it is recommended that any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.
- Your infant carrier should be securely belted to the vehicle, even when unoccupied because in a crash an unsecured infant carrier may injure other passengers.
- Please take a rest every two hours if you are travelling with a baby in the infant carrier.
- Please check the infant carrier condition if you are going to travel a long distance with a child.
- Please put all excess luggage into the boot of your car if you are going to travel with a baby, because loose items may hurt a baby when travelling on unstable roads or because they move suddenly when braking.
- Please always check the infant carrier before you place a baby into it.
- Please get in touch with the dealer if anything breaks on the infant carrier. Only the manufacturer or an authorised agent may do repairs. **DO NOT** try and fix the infant carrier by yourself. It might be damaged or cause more damage.
- Always check the buckle hole before you buckle up as it may contain crumbs or obstructions that prevent a secure lock.
- Keep your infant carrier out of reach of children when not in use.
- Please keep the plastic packaging bag out of the reach of children when unpacking the infant carrier.
- **NEVER** place the infant carrier on a seat where an air bag is active.
- Do not modify the infant carrier.

Notices

1. The infant carrier must only be used in vehicles which are fitted with a three point seat belt system that has been approved by regulation ECE-16 or similar.
2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle hand book that the vehicle is capable of accepting a 'Universal' child restraint for this group.
3. The infant carrier is a 'Universal' child restraint; it conforms to regulation ECE-R44/04 for general use in vehicles. It will fit most, but not all vehicle seats.
4. This infant carrier has been declared 'Universal' under more stringent conditions than those applied to earlier designs, which do not carry the 'Universal' mark.
5. Infant carriers can mark vehicle seat upholstery. The manufacturer cannot be held responsible for damage or marking to vehicle seats.
6. Never use rearward facing infant carrier on a passenger seat with an active airbag.
7. If in doubt, consult manufacturer or the retailer.

Safety advice (when attached to the compatible stroller)

WARNING: To avoid injury ensure that your child is kept away when unfolding and folding this product.

WARNING: Do not let your child play with this product.

WARNING: Never leave your child unattended.

WARNING: Ensure that all the locking devices are engaged before use.

WARNING: Always use the restraint system. Always use the crotch strap in combination with the waist belt.

WARNING: Parcels, accessories and other items (e.g. hand bags, shopping bags, etc) that are placed on the handles, back of the backrest or sides of the pushchair will affect the stability of the pushchair.

WARNING: Always use the most reclined position for new born babies.

WARNING: Do not lift and carry the pushchair with a child in it.

WARNING: Do not use pushchair on steep slopes, stairs, escalators, beaches, mud, etc.

WARNING: Check that the pushchair body or seat unit attachment devices are correctly engaged before use.

WARNING: Do not allow your child to climb unassisted into or out of the pushchair.

WARNING: Ensure that children are clear of moving parts before making adjustments.

WARNING: Never leave raincovers, hoods and aprons on indoors or in hot weather as your child might overheat.

WARNING: Do not use replacement parts or accessories other than those approved by the manufacturer as others may render the product unsafe.

WARNING: Do not load the basket with a weight in excess of 2kg.

WARNING: Always apply the brakes when the pushchair is stationary, and when placing and removing children.

WARNING: Taking children up or down stairs, escalators, steps, steep slopes and muddy/rough terrain could be dangerous and should not be attempted. Remove your child from the pushchair for easy carrying to negotiate such hazards, or simply avoid them.

WARNING: Never assume a driver can see you or your child.

WARNING: If your pushchair is to be used by someone who is unfamiliar with it, e.g. grandparents, then show them how it works before letting them use it.

WARNING: This pushchair is not suitable for running or skating.

WARNING: Hold onto your pushchair when close to moving vehicles and trains as the draught from the vehicles may move the pushchair even with the brakes on.

WARNING: This product is designed to carry only one child at a time.

Your 3 year warranty

Whilst we make and test our products to the highest standards of durability there's always a small chance of a hiccup! Our promise is to repair, replace or refund a MyChild product that has an identified manufacturing defect from the date of purchase for a full 3 years thereafter at no extra cost.

However, you must register within 28 days of the date of purchase to receive the full 3 years guarantee!

To receive your full guarantee you can register your product by:
visiting www.mychildonline.co.uk/warranty.html and complete the warranty form,
or by telephone on 0161 335 2508.

Contents

Welcome	5
Parts checklist	6
Positioning the child car seat	7
Adjusting the carry handle	8
Adjusting the shoulder harness height	8-10
Fitting the harness	11-13
Fitting the child seat in a vehicle	13-14
Attaching the seat to the travel system chassis	15
Removing the seat from the travel system chassis	16
Care and maintenance	17


Welcome

Thank you for purchasing the MyChild Easy Twin Car Seat.
The Easy Twin Car Seat when used in conjunction with the Easy Twin Car Seat Adaptors can be attached to the Easy Twin Pushchair to form part of a versatile travel system.

Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Your child's safety is your responsibility. If you have a query with this product or require replacement parts, please contact the MyChild Helpline on 0161 335 2508.

Parts checklist

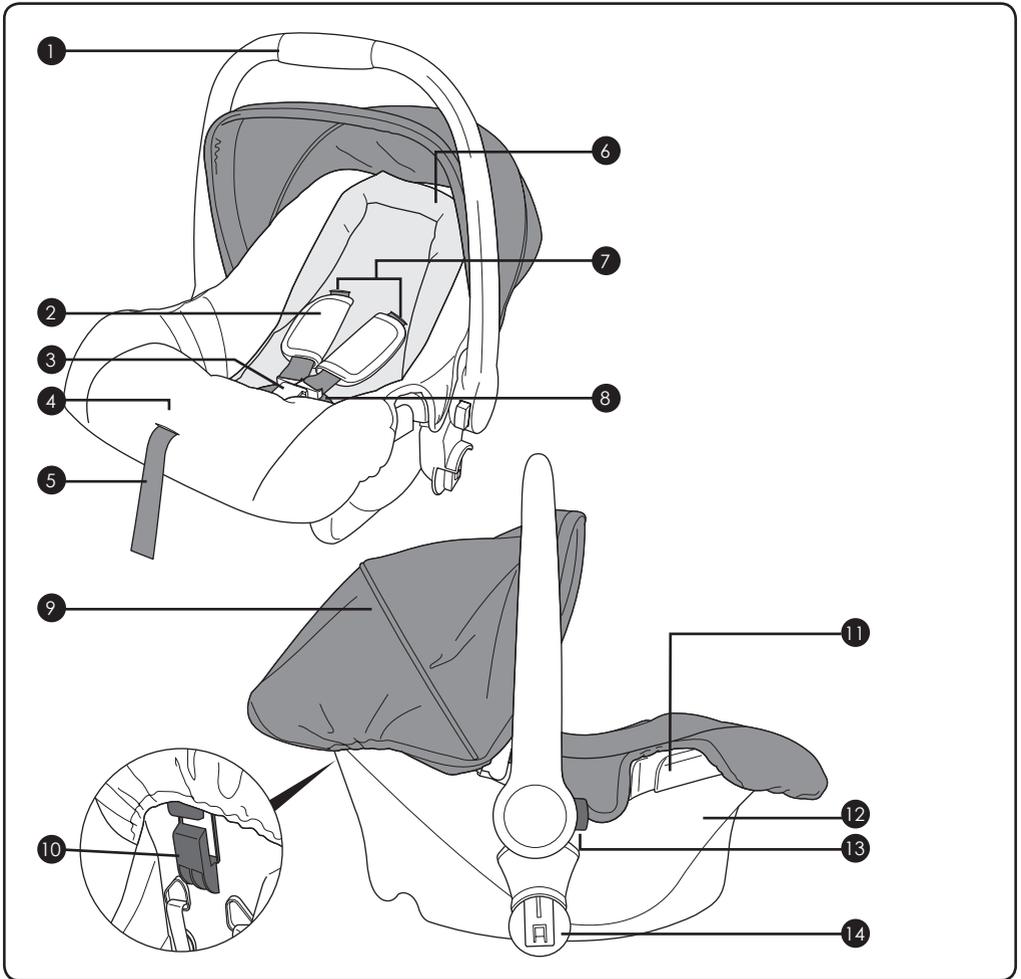

- | | |
|--|---|
| 1 Carry handle | 8 Crotch pad |
| 2 Shoulder pads | 9 Hood |
| 3 Harness buckle | 10 Diagonal seatbelt guide (on rear of shell) |
| 4 Harness adjuster button (under seat cover) | 11 Lap belt guides |
| 5 Harness adjuster strap | 12 Shell |
| 6 Insert cushion | 13 Handle adjuster buttons (on left and right of shell) |
| 7 Shoulder strap slots | 14 Pushchair connectors* |

* Requires one of the Easy Twin Car Seat Adaptors (sold separately).

Positioning the child car seat


The child car seat can only be used with an automatic 3-point safety belt (A) and **NOT** with a 2-point lap belt (B).

The child car seat can be secured on forward-facing back seats of the vehicle by using the existing seat belts. However, on some seats, if the installation is not properly secured, we suggest you try another seat in your vehicle.

Although not recommended, the child car seat can be used on a passenger side front seat, so long as there is no active airbag in place.


WARNING: NEVER use the child car seat on a passenger seat that is fitted with a front airbag. THIS CAN BE VERY DANGEROUS. Refer to your vehicle owner's manual for information on side air bags and infant restraint installation. If in any doubt, contact the manufacturer/dealership for clarification.

WARNING: Never use on rearward or side facing vehicle seats

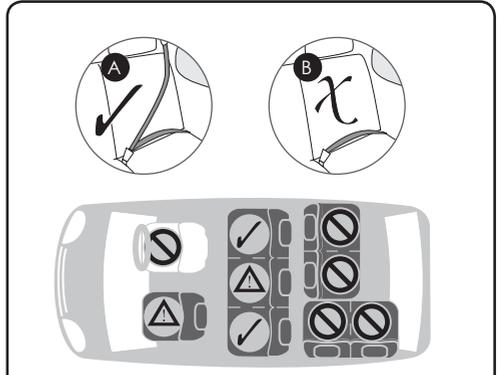

Front passenger seat (no active airbag)	Yes
Front passenger seat (active airbag)	NO
2-point seatbelt	NO
3-point seatbelt	Yes
Back left & right seats	Yes
Back centre seat (3-point seatbelt)	Yes
Back centre seat (2-point seatbelt)	NO
Side facing seats	NO
Rear facing seats	NO

The child car seat must not touch the front passenger seat.

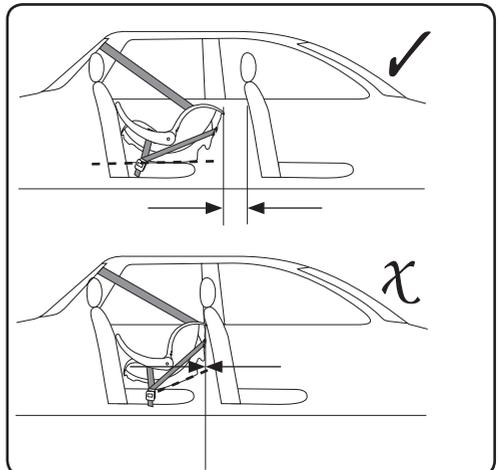


Adjusting the carry handle

The carry handle has 3 positions.

- (1) Feeding/non-rocking position.
- (2) Rocking position.
- (3) Carrying position.
- (4) Fitting position: Make sure handle is locked before lifting.

Press both buttons (A) and rotate the handle to the desired position.


WARNING: NEVER place the child car seat on a soft surface e.g. cushion, mattress, pillow etc, due to risk of suffocation if child car seat tips over. Never leave a child unattended.

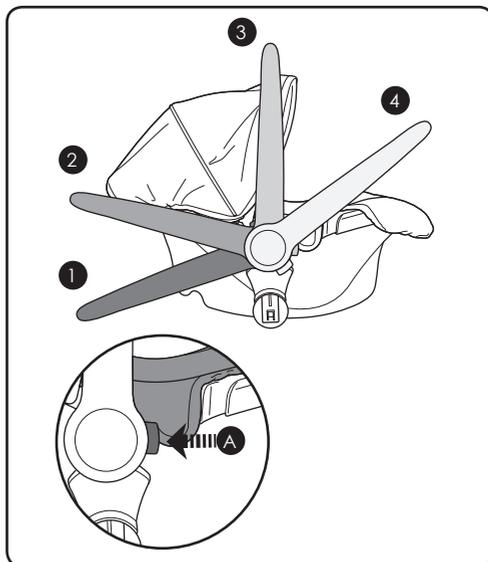

Adjusting the shoulder harness height


The harness should exit the child car seat at the same height as the child's shoulder and should not exit higher or lower than the child's shoulder.

WARNING: You should not attempt to adjust the harness height with a child seated in the child car seat.

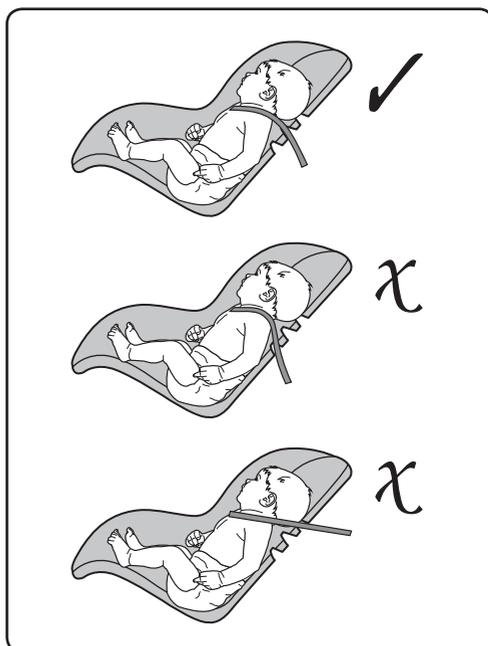


Adjusting the shoulder harness height (continued)

Press the belt adjuster button and pull on the shoulder harness straps to create slack.

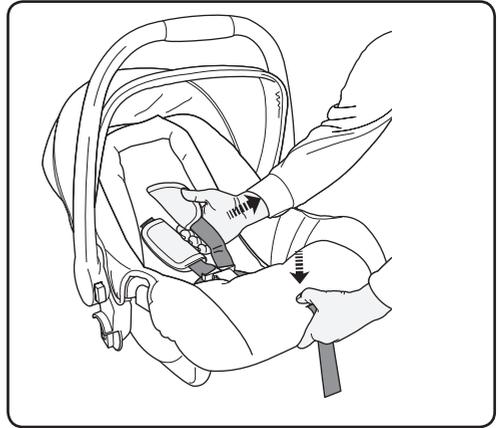


Press the red release button (A), unbuckle the harness, move the shoulder straps apart and remove the shoulder pads.

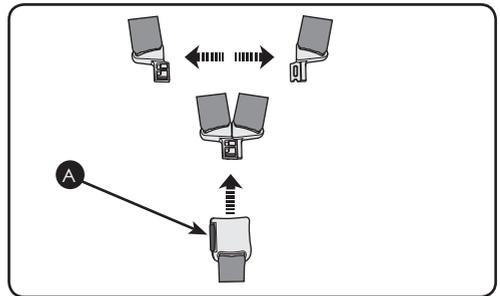

Feed the straps through from the front of the seat out to the back.


Pass the shoulder straps back through at one of the two desired positions (B) ensuring the straps are not twisted.

Thread the shoulder pads back onto the shoulder straps.

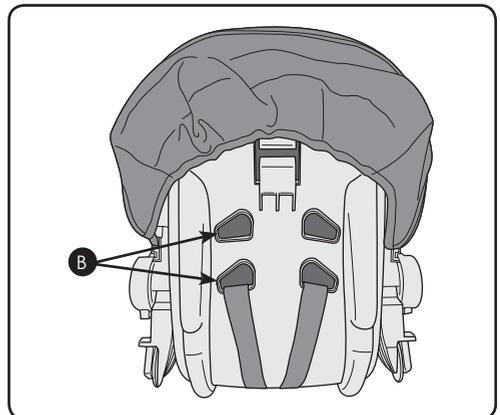


Adjusting the shoulder harness height (continued)

Buckle up the harness. Connect the two shoulder strap connectors (C) and insert into the buckle (D). Ensure harness buckle is firmly clicked into place.

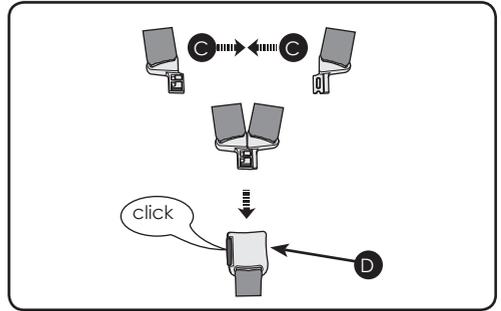


Pull the harness adjuster strap tight and check straps are not twisted.


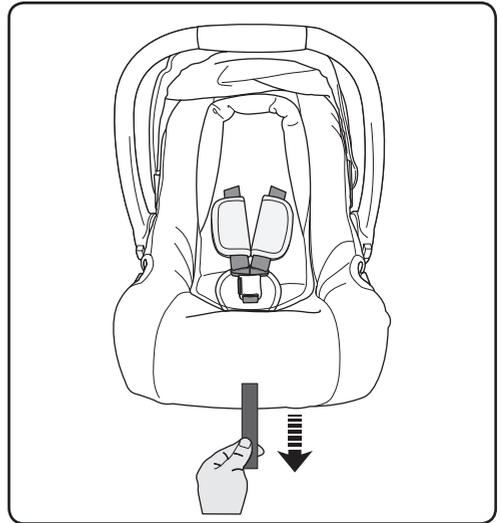


Fitting the harness

Press the belt adjuster button and pull on the shoulder harness straps to create slack.

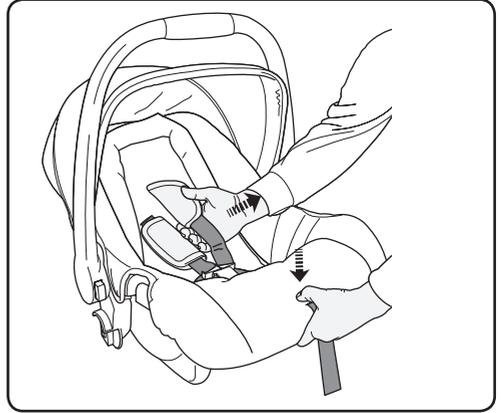

Press the red release button (A), unbuckle the harness and move the shoulder straps apart.

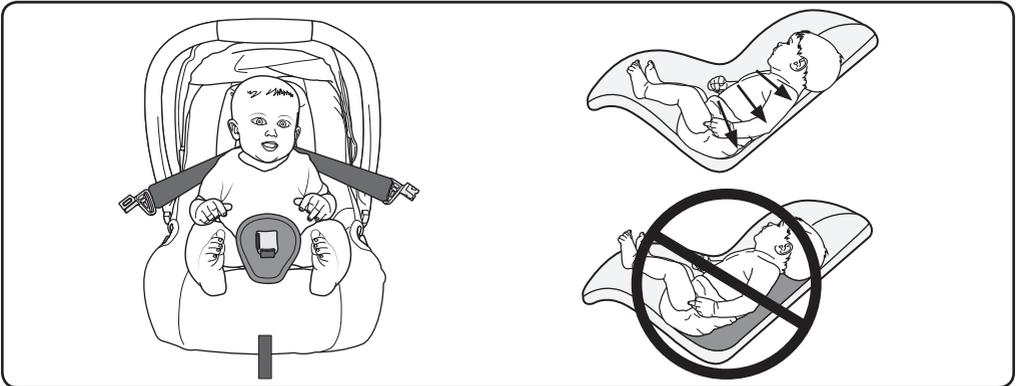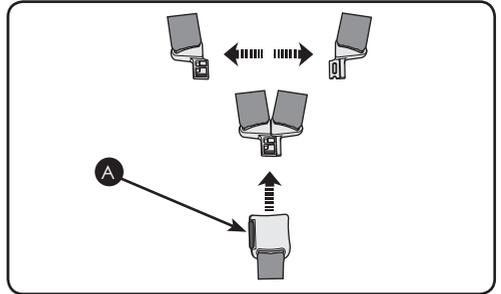

Place the child in the child car seat and ensure there are no spaces under the child.

Note: a new born baby may need extra support around the head and body. Ensure you use the supplied insert cushion if you are going to use it for a newborn or small baby less than 7 months old (9kg or less). Also ensure that the shoulder harness is at the lowest height setting.


Fitting the harness (continued)

Place the shoulder harness over the shoulders.

Note: Do not place your child in a sleeping bag, blanket or other bulky wrapping before putting the child in the child car seat. The shoulder straps will not fit snugly and the child will not be safe.



Buckle up the harness. Connect the two shoulder strap connectors (B) and insert into the buckle (C). Ensure harness buckle is firmly clicked into place.

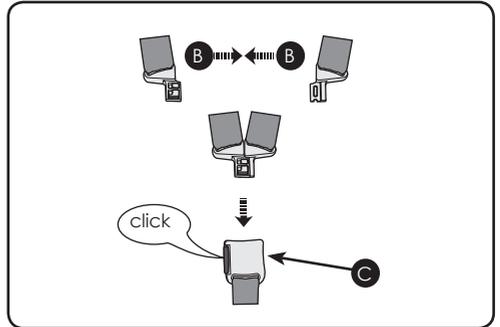


Pull the harness adjuster strap to secure the harness around the child.



Fitting the harness (continued)

The harness should allow 1 finger-width (1cm) of space at the top of the shoulders. This is the ideal tightness.

Note: Check that the buckle is secured by tugging the shoulder and waist straps.


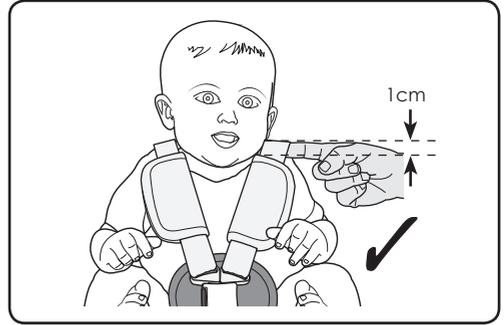


Fitting the child seat in a vehicle

Choose a seat suitable for fitting the child car seat to. See page 7, 'Positioning the child car seat'.

Place the child car seat rearward-facing on the vehicle seat.

IMPORTANT: Ensure the handle is in the **FITTING** position as shown.

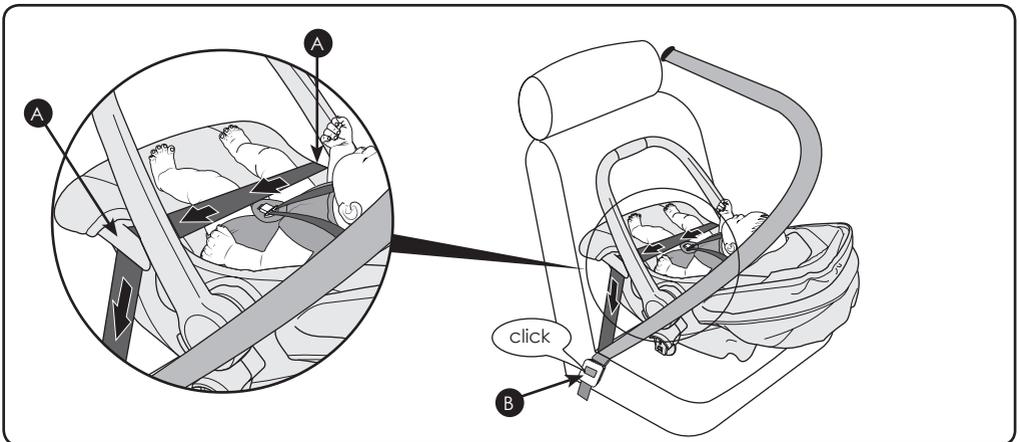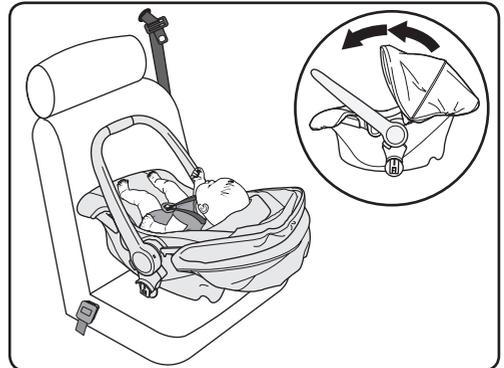


Place the vehicle lap belt across the child car seat and slide the lap belt into the slots (A) on both sides of the child car seat. Buckle up the vehicle seat belt (B).

Fitting the child seat in a vehicle (continued)


Take the diagonal belt around the back of the child car seat and slot it into the rear seat belt guide (C).

Thread the section of diagonal belt which runs from the seat buckle to the rear seat belt guide (C) between the shell and the pushchair adaptor (D).

Once the seat belts are in their correct mounting points make sure the seat belt buckle is secure and there are no twists in the belt and that all slack is removed from the lap and diagonal sections.

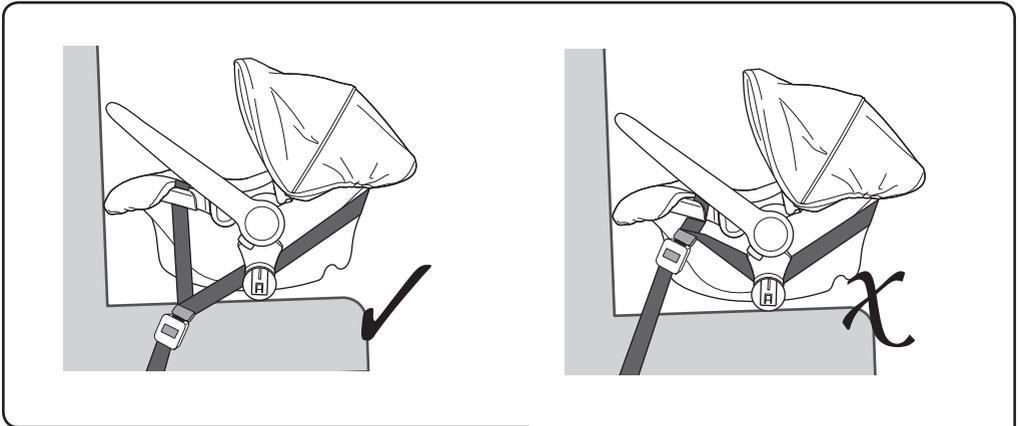

Note: If the vehicle seatbelt buckle is above the top edge of the child seat then this car seat is not suitable for the vehicle (this is called 'buckle crunch' and can cause the vehicle seatbelt to come undone in an accident).

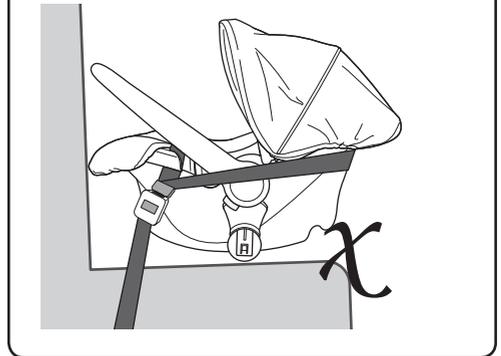

Attaching the seat to the travel system chassis

In order to use your Easy Twin Car Seat as part of the Easy Twin Travel System you will need to have purchased either an upper-left-adaptor **OR** an upper-left-adaptor **AND** the lower-right-adaptor.

If you only want to use a single car seat on the Easy Twin Pushchair, then you will need the upper-left-adaptor.

If you wish to use two car seats then you will need the upper-left-adaptor and the lower-right-adaptor.

IMPORTANT: DO NOT use the lower-right-adaptor on its own. It **MUST ONLY** be used combined with the upper-left-adaptor.

ALWAYS use the upper-left-adaptor if you want to use just one car seat.


Before fitting the car seat you will need to have attached the car seat adaptor(s) as described in the Easy Twin Car Seat Adaptors user manual.

WARNING! NEVER use the lower-right-adaptor on its own. **ALWAYS** use the lower-right-adaptor in combination with the upper-left-adaptor.

WARNING! Always ensure the stroller brakes are on before attaching or removing any attachments (i.e. Car seat adaptors, car seats etc).

WARNING! NEVER attempt to attach or use the car seat in a forward facing position (facing away from the stroller handle).


The car seat **MUST** be attached in the parent facing position so that it faces the stroller handle. Line up the connectors on the car seat with the two mounting points on the car seat adaptor. Push the car seat down onto the adaptor ensuring both connectors click into place.

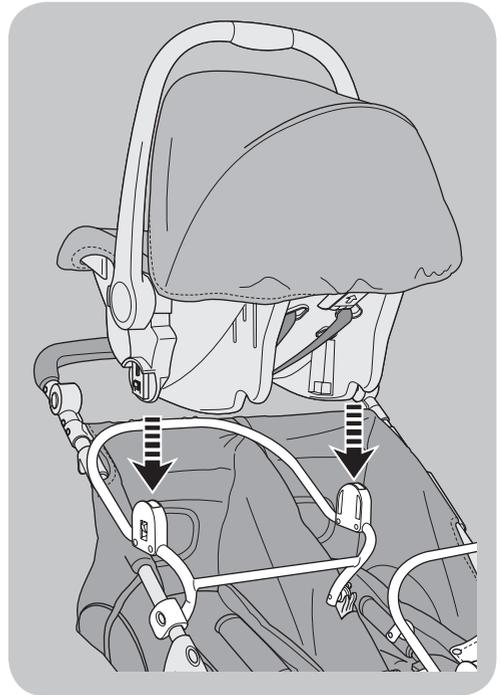

Removing the seat from the travel system chassis

WARNING! Always ensure the stroller brakes are on before attaching or removing any attachments (i.e. Car seat adaptors, car seats etc).

Push in the two buttons on each side of the car seat adaptor and using the car seat handle lift the car seat free from the adaptor.

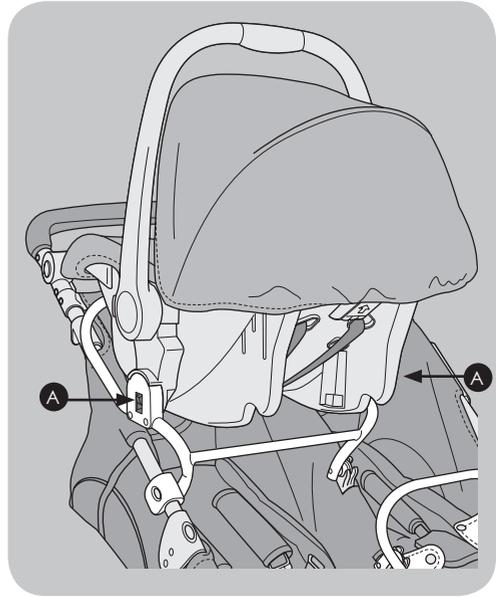

Care and maintenance

Storage

- 1) Store this child car seat in a safe place when not in use.
- 2) **DO NOT** place heavy objects on top of it.
- 3) Always store the child car seat in a dry environment.
- 4) **DO NOT** store the child car seat near a direct heat source such as a radiator.

Covers

- 1) The seat cover is easily removable and should be hand washed with a pH neutral soap and cold water.
- 2) Do not press, iron, dry clean, tumble dry or wring the covers.
- 3) Do not use solvents, caustic or abrasive cleaning materials.
- 4) Dry flat, away from direct heat and sunlight.
- 5) If the seat covers need to be replaced only use parts certified by the manufacturer. They are the only ones that are guaranteed to have been safety tested and designed to fit this seat.

Plastic/Metal Parts


- 1) Wipe clean using a mild soap and warm water.
- 2) You must not remove, dismantle or alter any part of the seat shell.
- 3) You must not oil or lubricate any part of the seat shell.

Inspection

- 1) Check your child car seat regularly for wear and tear.
- 2) The child car seat may have a slight rattle when not in use, this is normal. If in any doubt, contact the Helpline immediately.
- 3) Check the adjustable parts of your child seat at intervals of about 6 months to ensure it is still fits correctly for your growing child.



DO NOT carry the child seat with the handle in the storage position.

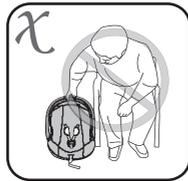

DO NOT use handle to support your weight e.g. when standing up or sitting down.



DO NOT place in a shopping cart.



DO NOT carry against your hip.



Customerservice@kooltrade.co.uk
Imported by MyChild. M34 3QA
www.mychild.co.uk
Tel: 0161 335 2508