




Easy Twin Car Seat Adaptors

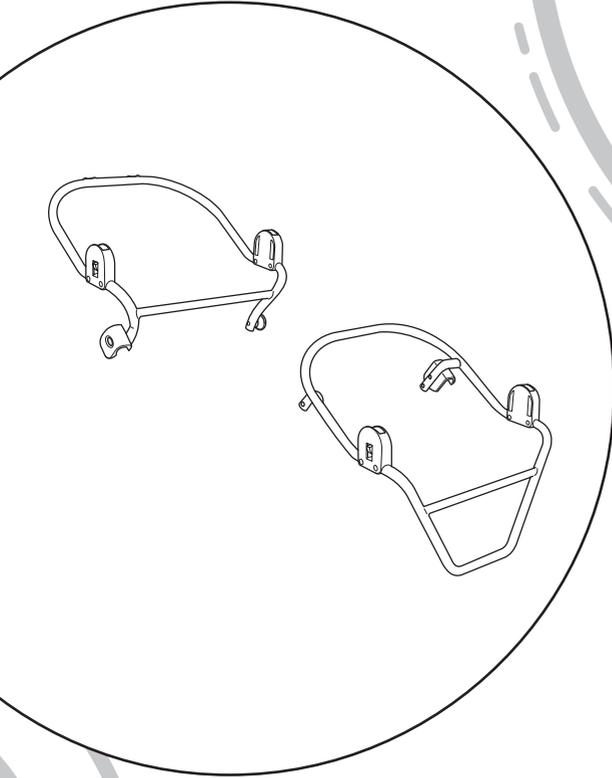

This product is tested to: BS EN 1888:2012

Suitable for children from: BIRTH up to 9kg

INSTRUCTIONS: Please read carefully and keep for future reference. Your child's safety may be affected if you do not follow these instructions

Safety instructions

Important: Read, understand and follow these instructions carefully and retain for future reference

- The car seat is intended for children from birth to a maximum weight of 9kg.
- **WARNING:** Never leave your child unattended.
- **WARNING:** This product is not suitable for running or skating.
- **WARNING! NEVER** use the lower-right-adaptor on its own.
- **ALWAYS** use the lower-right-adaptor in combination with the upper-left-adaptor.
- **WARNING!** Always ensure the stroller brakes are on before attaching or removing any attachments (i.e. Car seat adaptors, car seats etc).
- **WARNING! NEVER** attempt to attach or use the car seat in a forward facing position (facing away from the stroller handle).
- **WARNING!** DO NOT attempt to remove the car seat adaptors whilst a car seat is attached. **ALWAYS** remove the car seat before removing the car seat adaptors.

Care and maintenance

- Wipe clean with a mild detergent and warm water.
- DO NOT use bleach
- DO NOT use abrasive substances.

Your 3 year warranty

Whilst we make and test our products to the highest standards of durability there's always a small chance of a hiccup! Our promise is to repair, replace or refund a MyChild product that has an identified manufacturing defect from the date of purchase for a full 3 years thereafter at no extra cost.

However, you must register within 28 days of the date of purchase to receive the full 3 years guarantee!

To receive your full guarantee you can register your product by: visiting www.mychild.co.uk/warranty.html and complete the warranty form, or by telephone on 0161 335 2508.


Welcome

Thank you for purchasing the MyChild Easy Twin Car Seat Adaptor. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.



Your child's safety is your responsibility. If you have a query with this product or require replacement parts, please contact the MyChild Helpline on 0161 335 2508.

Identifying your adaptor(s)

Using the diagram below: identify the adaptor(s) you have purchased and then follow the instructions for the adaptor(s) accordingly.

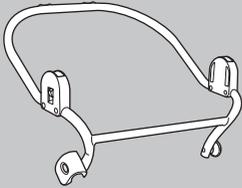

upper-left-adaptor

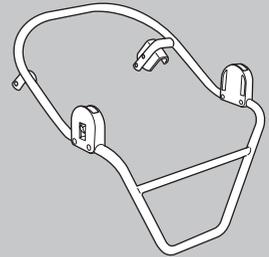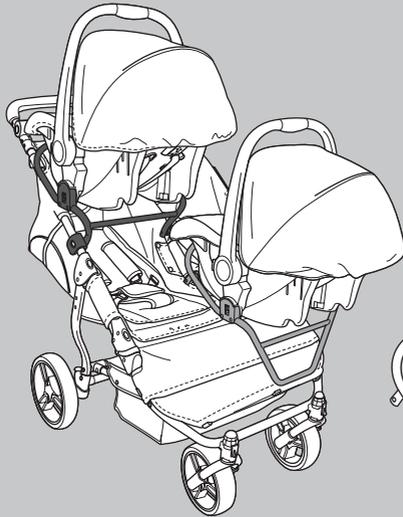

lower-right-adaptor

There are two very distinct car seat adaptors and the Easy Twin Car Seat will fit on to either of the adaptors - BUT - depending on your situation you may require one or both of the adaptors.


If you only want to use a single car seat on the Easy Twin Pushchair, then you will need the upper-left-adaptor.

If you wish to use two car seats then you will need the upper-left-adaptor and the lower-right-adaptor.


IMPORTANT: DO NOT use the lower-right-adaptor on its own. It **MUST ONLY** be used combined with the upper-left-adaptor.

ALWAYS use the upper-left-adaptor if you want to use just one car seat.


Attaching the upper-left-adaptor

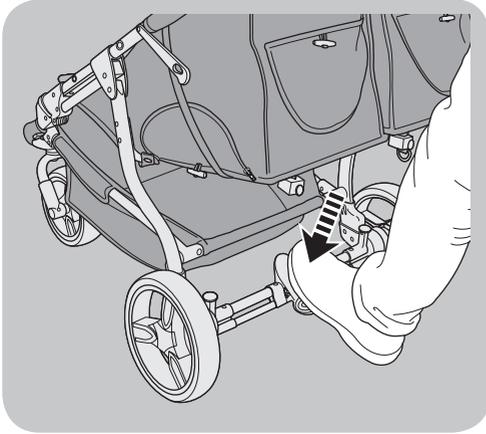


1. **Apply the brake:** Ensure the stroller brake is on and that the stroller cannot move.

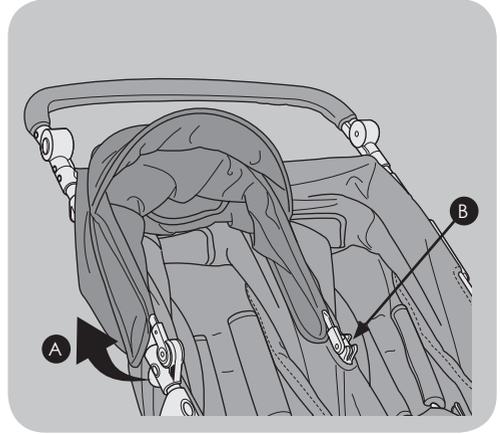

2. **Remove the hood:** Unfasten the press studs on the back of the left-hand hood. Unclip the hood-clip (A) and pull the round connector from the mounting point (B).

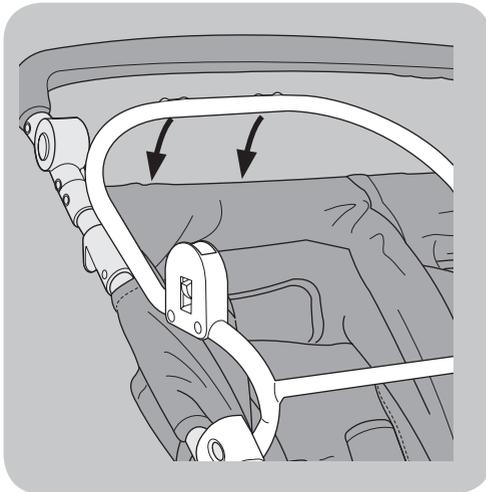

3. Place the two hooks on the car seat adaptor over the top of the stroller chassis.

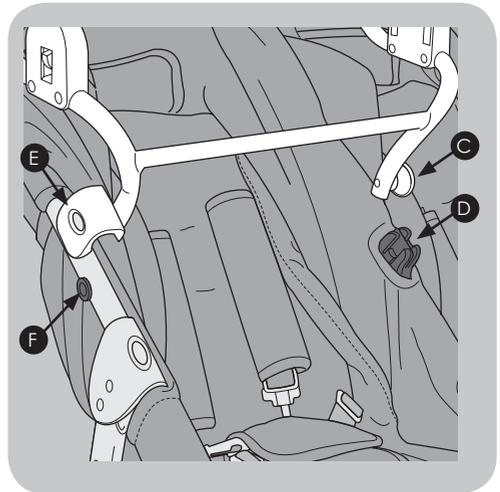


4. Push the round connector (C) on the car seat adaptor into the mounting point (D). Connect the clip (E) over the stud at point (F).


Pull the adaptor to check both sides are secured properly.

Attaching the lower-right-adaptor


WARNING! NEVER use the lower-right-adaptor on its own. ALWAYS use the lower-right-adaptor in combination with the upper-left-adaptor.

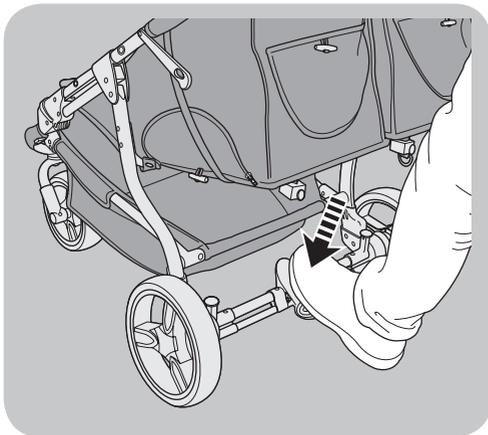


1. **Apply the brake:** Ensure the stroller brake is on and that the stroller cannot move.

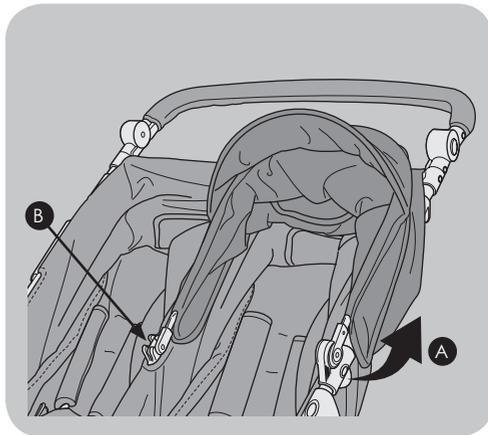

2. **Remove the hood:** Unfasten the press studs on the back of the right-hand hood. Unclip the hood-clip (A) and pull the round connector from the mounting point (B).

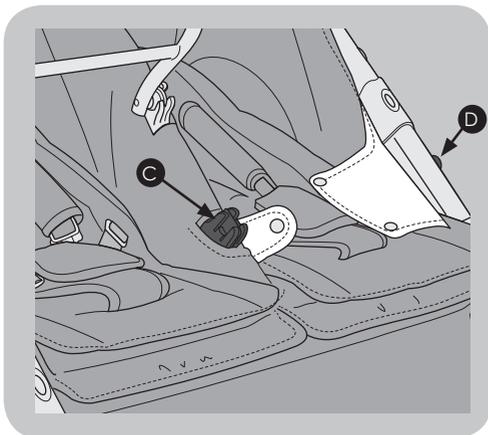

3. **Expose the two lower mounting points:** Unfasten the press stud on the fabric covering the lower-centre mounting point (C). Unfasten the two press studs on the fabric covering the lower-right stud (D).

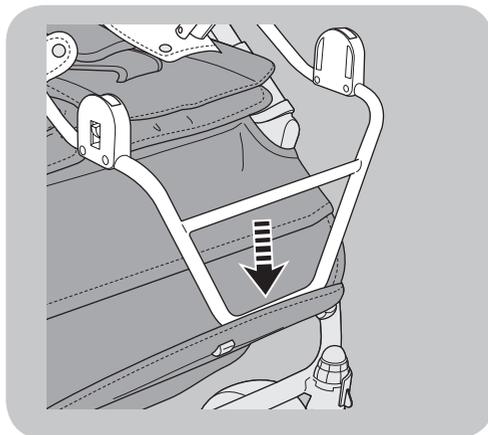


4. Place the bottom bar of the car seat adaptor onto the footrest of the stroller.

Attaching the lower-right-adaptor (continued)

4. Push the round connector (E) on the car seat adaptor into the lower-centre mounting point (F). Connect the clip (G) over the lower-outer stud at point (H).

Pull the adaptor to check both sides are secured properly.

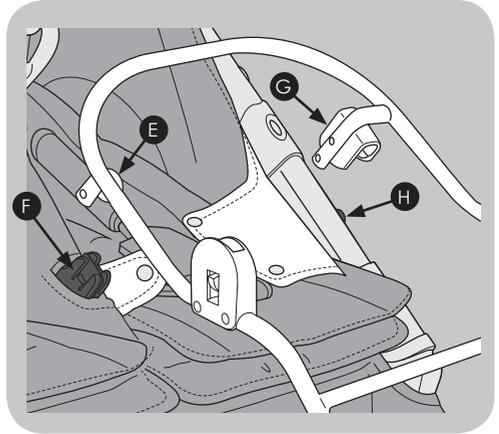


Attaching the car seat

WARNING! NEVER use the lower-right-adaptor on its own. ALWAYS use the lower-right-adaptor in combination with the upper-left-adaptor.

WARNING! Always ensure the stroller brakes are on before attaching or removing any attachments (i.e. Car seat adaptors, car seats etc).

WARNING! NEVER attempt to attach or use the car seat in a forward facing position (facing away from the stroller handle).


The car seat **MUST** be attached in the parent facing position so that it faces the stroller handle. Line up the connectors on the car seat with the two mounting points on the car seat adaptor. Push the car seat down onto the adaptor ensuring both connectors click into place.

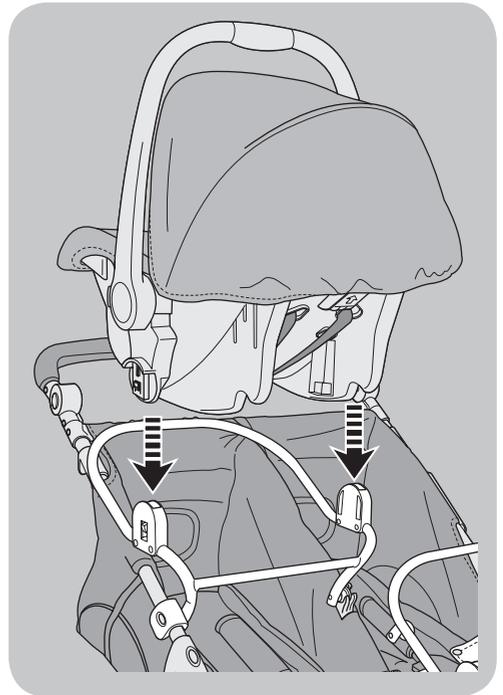

Removing the car seat

WARNING! Always ensure the stroller brakes are on before attaching or removing any attachments (i.e. Car seat adaptors, car seats etc).


Push in the two buttons on each side of the car seat adaptor and using the car seat handle lift the car seat free from the adaptor.

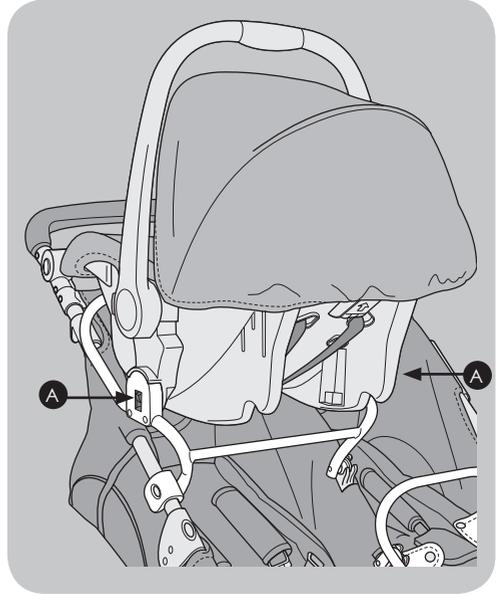

Removing the adaptors

WARNING! DO NOT attempt to remove the car seat adaptors whilst a car seat is attached. ALWAYS remove the car seat before removing the car seat adaptors.

1. Unclip the clip (A) and pull the round connector from the mounting point (B) and remove the car seat adaptor.

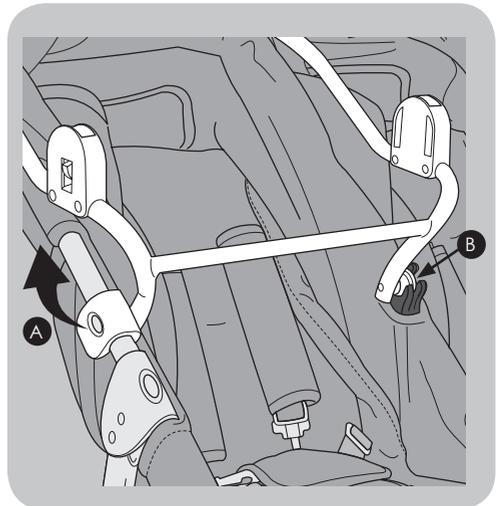



Customerservice@kooltrade.co.uk
Imported by MyChild. M34 3QA
www.mychild.co.uk
Tel: 0161 335 2508